

- Housing and Ins Assembly Transaxle
- Housing Assembly
- Housing Assembly - Rear Axle
- Housing Assembly Roof Slide
- Housing Cover - Gearshift
- Hub - Differential Gear Clutch
- Hub - Direct Clutch
- Hub - Intermediate Clutch
- Hub - Synchronizer
- Hub - Transmission Output Shaft
- Hub /Knuckle Assembly
- Hub Assembly - Clutch Release
- Hub Crankshaft Pulley
- Hub Synchronizer
- Hybrid Battery Cooler Assembly
- Hybrid Battery Fan
- Hybrid Battery Fan Motor
- Hybrid DC-to-DC Converter
- Hybrid High-Voltage Disconnect
- Hybrid Information Display
- Hybrid Traction/Electric Motor
- Hydraulic Actuator Assembly
- Hydraulic Piston
- Idler Assembly - Timing Belt
- Ignition Cylinder Lock
- Impeller - Water Pump
- Indicator - Rear Bracket
- Indicator Assembly - Oil Level
- Indicator Assembly - Radio Receiver Control
- Indicator Control Selector
- Inertia Switch
- Inflation Safety Belts
- Insert - Oil Pump Drive Gear
- Insert - Synchronizer Hub
- Insulator - Alternator
- Insulator - Front Radius Arm
- Insulator - Front Spring
- Insulator - Rear Axle Differential
- Insulator - Rear Spring
- Insulator A/C Cond
- Insulator EGR Tube
- Insulator Front Spring
- Insulator Rear Spring
- Insulator Stabilizer Assembly
- Insulator Steering Gear
- Insulator/Mount - Engine Block
- Intake Manifold Run
- Intake Manifold Support
- Inter Clutch Cylinder Assembly
- Intercooler
- Interior/Exterior Door Handle/Lever
- Intermediate Clutch - Piston Seal
- Internal Separator Plate
- Inverter System Controller (ISC) (Hybrid)
- Joint Assembly - Front Suspension
- Joint Assembly - Front Suspension Lower
- Joint Assembly - Rear Axle Shaft
- Joint Assembly - Rear Suspension Lower
- Joint Assembly - Shifter Rod Front
- Knock Sensor
- Knuckle Assembly - Universal Joint
- Knuckle - Front Wheel
- Knuckle - Rear Wheel
- Lamp - Interior Pillar\*
- Oxygen Assembly - Transmission Control
- Module - Passive Restraint
- Module - Water Detection
- Module and Control Assembly Brake Anti-Lock
- Module Assembly - Aux Controls
- Module Assembly - Ignition
- Module Assembly - Multi-Function
- Module Assembly - Transmission Case
- Module Instrument Cluster
- Motor - Adjustable Pedal
- Motor and Drive Assembly
- Motor Assembly - Blower Heater
- Motor Assembly - Elect Shift
- Motor Assembly - Steering Column Release
- Motor Assembly - Vacuum Controller
- Multispeed - Wiper Motor
- Navigation Antenna
- Noise Insulator
- Nox Sensor
- Piston - Defroster
- Nozzle - Windshield Washer
- Nozzle and Duct Heater Dems
- Nozzle Assembly - Fuel Injector Cylinder
- Nut Assembly Front Wheel Bearing
- Nut Steering Gear
- Odometer Assembly
- Oil Actuator Assembly
- Oil Cooler Transmission
- Oil Level Sensor
- Oil Pan
- Oil Pressure Sender
- Oil Pump
- Oil Pump Gear
- Oil Pump Housing
- Oil Seal - Output Seal
- Oil Seals - All Internal and External
- Oil Selector Main Control Valve Control
- Orifice - Power Steering Tube Seal
- O-ring - Locking Hub
- O-ring - Oil Cooler
- O-ring - Pressure Warning Switch
- O-ring - Suspension Air Spring Dryer Conn
- O-ring Solenoid
- Output Flange Ret Nut
- Output Shaft Bearing
- Output Shaft Seal
- Oxygen Sensor
- Pad - Brake and Clutch Pedal
- Panel Assembly Roof
- Parking Brake Cam Plate
- Parking Pawl
- Pawl Front/Rear Seat Back Latch
- Pawl Overdrive Shift
- PCM (Powertrain Control Module)
- PCV and Elbow Assembly
- PCV Tube
- Pedal Adjuster Assembly
- Pedal Assembly - Accelerator
- Pedal Assembly - Brake
- Pin - Differential Pinion Shaft
- Pin - Door Hinge
- Pin - Piston
- Pin - Planetary Gear
- Pin - Steering Column
- Pin Lock - Rear Spring Shackle
- Pin Plate
- Pinion - Diff Spider
- Pipe Brake Anti-lock
- Piston - Driveshaft Accumulator
- Piston - Front Servo
- Piston - Transmission Reverse
- Piston and Connecting Rod Assembly
- Piston Assembly - Brake Cylinder
- Piston Assembly - Transmission Reverse Clutch
- Piston Pin - Front Band
- Piston Ring
- Pivotal - Front/Rear Seat Back
- Pivotal Rear Seat Back
- Planetary Assembly - Transmission Rear
- Planetary Front
- Plate - Camshaft Thrust
- Plate - Crankcase Separator
- Plate - Driveshaft Yoke Center
- Seal - Front Wheel Drive Inboard
- Seal - Front Wheel Hub
- Seal - Front/Rear Brake Hub
- Seal - Fuel Tank Filler
- Seal - Heater Core
- Seal - Housing Piston
- Seal - Hub Grease
- Seal - Intake Manifold
- Seal - Oil Pan Front
- Seal - Oil Pan Rear
- Seal - Oil Pump Body
- Seal - Outlet Fitting
- Seal - Parking Brake Shaft
- Seal - Power Steering Gear Input Shaft
- Seal - Rear Axle
- Seal - Rear Wheel Drive Inboard
- Seal - Rocker Arm Shaft
- Seal - Sector Shaft
- Seal - Steering Gear Valve
- Seal - Water Pump
- Seal - Window Regulator Switch
- Seal Assembly - Steering Column
- Seals - Integral Power Steering Gear
- Seals and Gaskets
- Seat Back Reclining Mechanism
- Seat Belt and Buckle Rear Seat
- Seat Position Center
- Seat Track Support Assembly
- Sender - Fuel Tank
- Sender - Oil Pressure
- Sender - Water Temp
- Sensor - ABS
- Sensor - Air Suspension Level
- Sensor - Air Temperature
- Sensor - Crank Timing
- Sensor - Front Suspension Level
- Sensor - Fuel Injector Pump
- Sensor - Low Coolant
- Sensor - Oil Temperature
- Sensor - Output Shaft
- Sensor - Parking Aid System
- Sensor - Rear Suspension Level
- Sensor - Shock Absorber
- Sensor - Skid Control
- Sensor - Sliding Door Actuator
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Separator Assembly - Fuel Vapor
- Servo Assembly - Automatic Temperature Control
- Shackle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and Bearing Assembly
- Shaft and CV Joint Assembly
- Shaft and Rack Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft Assembly - Lift
- Shaft Assembly - Transmission Input
- Shaft Bushing Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Front
- Shield - Parking Brake
- Shield - Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Shim A/C Compressor
- Skid Control Module Rear
- Spring - Front Suspension Torsion
- Spring - Gear Tensioner
- Spring - Turbine Inboard
- Spring - Overrunning Clip
- Spring - Parking Pawl
- Spring - Rear Suspension Torsion
- Spring - Reverse Inhibitor
- Spring - Shift Bias
- Spring - Tran G/Shift Lever
- Spring Assembly - Front
- Spring Assembly - Rear
- Springs Slipper
- Sprocket - Crankshaft
- Sprocket - Lock Ring
- Start/Stop Push-Button Switch
- Starter Motor Assembly
- Starter Motor Solenoid
- Stationary Elevated Ride Control
- Steering Actuator Valve
- Servo Assembly - Auxiliary Electric Power
- Solenoid - Engine Timing
- Solenoid - Timing
- Solenoid - Luggage Door
- Solenoid - Press Regulator
- Solenoid - Regulator
- Solenoid - Transmission Downshift
- Solenoid - Vacuum Modulator
- Solenoid and Manifold Actuator
- Solenoid Assembly - Fuel
- Solenoid Assembly - Trans
- Sonic Plenum EGR Valve
- Spacer - Front Spring
- Spacer - Power Steering
- Spacer - Rear Spring
- Spacer - Transmission
- Spare Wheel Carrier
- Support Assembly - Drive
- Support Assembly - Trans
- Switch - A/C Comp Clutch
- Switch - A/C Pressure
- Switch - A/C Temperature Control
- Switch - Back-Up Light
- Switch - Brake Anti-Lock
- Switch - Brake Low Pressure
- Switch - Brake Pressure Warning
- Switch - Brake Traction Lock Control
- Switch - Coolant Temp
- Switch - Electrical Windshield Wiper
- Switch - Fuel Filter
- Switch - Ignition Anti-Theft
- Switch - Pressure Warning
- Switch - Temp Control
- Switch - Temp Control Valve
- Switch - Turn Indicator
- Switch - Vacuum Pump
- Switch and Bracket Assembly - Tailgate
- Switch Assembly - Brake Warning
- Switch Assembly - Door Ajar
- Switch Assembly - Door Lock
- Switch Assembly - Door Warning
- Switch Assembly - EGR
- Switch Assembly - Elect Shift
- Switch Assembly - Fuel Tank
- Switch Assembly - Gear Shift Neutral
- Switch Assembly - Lock Sensor
- Switch Assembly - Parking Brake
- Switch Assembly - Pressure
- Switch Assembly - Radio
- Switch Assembly - Rear Axle
- Switch Assembly - Speedometer
- Switch Assembly - Window Regulator
- SYNC® Module
- Synchronizer Assembly
- TCM (Transmission Control Module)
- Temperature Indicator
- Tensioner - Timing Chain
- Thermistor/Temperature Sensor Probe
- Thermostat Housing
- Throttle Valve Cable
- Thrust Bearing
- Tie Rods Inner/Outer
- Timing Chain Tensioner
- Timing Gear Set
- Torque Arm Assembly
- Torque Converter Assembly
- Torque Converter Pressure Valve
- Torque Converter Support
- Torsion Bar - Front
- Torsion Spring
- TPMS Sensor
- Track - Door Center
- Track Front/Rear Seat Inner
- Track Front/Rear Seat Strap
- Trailer Brake Module
- Transceiver - Passive Anti Theft
- Transducer - EGR
- Transducer - EGR Back Pressure
- Transducer - Hydraulic Pressure
- Transducer Assembly
- Transfer Case Assembly
- Transfer Case Encoder/Shift Motor
- Transmission - Actuator Assembly
- Transmission - Bearing
- Transmission - Case Cover
- Transmission - Control Pivot
- Transmission - Mount
- Transmission - Oil Cooler Line
- Transmission - Oil Pump
- Transmission - Sun Gear
- Transmitter Remote Control
- Trip Minder Assembly
- Tube - Fuel Injection
- Tube - Oil Level Indicator
- Tube - Turbo Air Outlet
- Tube - Turbo Oil Return
- Tube - Turbo Oil Supply
- Tube Air Suspension
- Tube Assembly - Oil Cooler
- Tube Vacuum Heat Valve
- Turbo Boost Gauge
- Turbo Discharge Pipe Gasket
- Turbocharger/Supercharger Unit - Factory-Installed
- Two Speed Shaft Repair
- U-bolt - Rear Spring
- U-bolt - Universal Joint
- Underbody Linkages and Couplings
- Universal Joint
- Vacuum Pump Gasket
- Vacuum Selector - Air Conditioner
- Valve - A/C Comp Low Pressure
- Valve - A/C Compressor Pressure
- Valve - Anti-Backfire
- Valve - Assembly H/L Cover
- Valve - Brake
- Valve - Brake Differential
- Valve - Brake Pressure Meter
- Valve - Brake Sensor
- Valve - Covers
- Valve - Door Vent
- Valve - EGR Vacuum Control
- Valve - Fuel Sender Check
- Valve - Guide
- Valve - Lube Connector
- Valve - Main Oil Pressure
- Valve - Throttle Center
- Valve - Throttle Pressure
- Valve - Transmission
- Valve Assembly - Brake
- Valve Assembly - Brake M/C
- Valve Assembly - Cooling Control
- Valve Assembly - Exhaust Air Sup
- Valve Assembly - Fan Thermostat Control
- Valve Assembly - Fuel Selector
- Valve Assembly - Fuel Tank Vent
- Valve Assembly - Main Control
- Valve Assembly - Master Cylinder Control
- Valve Assembly - Power Steering Control
- Valve Assembly - Thermal Vent
- Valve Assembly - Trans Control
- Valve Assembly - Vacuum Check
- Valve/Switch Assembly - Brake
- Vane Sensor
- Variable Assist Power Steering Module
- Variable Cam Timing Assembly
- Variable Camshaft Timing (VCT) Phasers
- Vehicle Emergency Messaging Module Assembly
- Vent - Rear Axle Housing
- Venturi A/C Evaporator
- Venturi Assembly A/C
- Viscous Coupler/Flexible Coupler
- Voltage Converter AC to DC
- Washer - Crankshaft Pulley
- Washer - Front Suspension Lower
- Water Bypass Pipe
- Water Outlet Connection
- Water Pump
- Wheel Cylinders
- Wheel Steering Assembly
- Window Crank Handle/Knob
- Windshield Wiper Motor
- Wiper Motor
- Wiper Motor Connector Grommet
- Wire - Power Steering Assist
- Wire - Speaker System
- Wire Assembly - Front/Rear Seat Control
- Wire Assembly - Neutral Switch
- Wire Assembly - RPM Sensor
- Wire Harness - A/C Fan
- Wire Harness - Air Conditioner
- Wiring - A/C Clutch
- Wiring - A/C Control Switch
- Wiring - Engine Loom
- Wiring - Exterior
- Wiring - Interior
- Wiring - Radio Amplifier
- Wiring Assembly - A/C Blower Motor Feed
- Wiring Assembly - Brake Skid
- Wiring Assembly - Interior/Engine/Exterior
- Wiring Assembly - Radio
- Worm - Parking Brake
- Yoke - Driveshaft Center
- Yoke - Shaft Support
- Yoke - Universal

- PTO Assembly
- Pulley - Alternator
- Pulley - Belt Idler
- Pulley - Water Pump
- Pulley and Bracket - Fan
- Pulley and Bracket Assembly - Fan
- Pulley Assembly - Belt Idler
- Pulley Assembly - Brake Vacuum Pump
- Pulley Assembly - Fan Belt
- Pulley Fan
- Pump - Front/Rear/Seat Pad Adjuster
- Pump - Windshield Washer
- Pump and Regulator Assembly
- Pump Assembly - Brake Vacuum Pump
- Pump Assembly Ex Air Supply
- Purge Regulation Valve
- Race and Bushing Assembly
- Rack Assembly - Steering Gear
- Radiator Assembly
- Radiator Tank Inlet Assembly
- Rail Roof Sliding Panel
- Rear Anti-lock Braking Valve
- Rear Axle Bearing
- Rear Axle Seal
- Rear Brake Lever
- Rear Brake Shoe Pin
- Rear Crankshaft Seal
- Rear Disc Brake Seal
- Rear Hub Assembly
- Rear Leaf Spring Shackles
- Rear Spring Air Suspension
- Rear Stab Bar Axle Meeting
- Rear Stabilizer Bar
- Rear Tube Assembly - Brake Master
- Ret Door Window Glass
- Return Assembly - Control Cable Bracket
- Ride Control Module
- Ring - Speed Sensor
- Ring - Transmission Synchronizer
- Rod - Clip/Slave Cylinder
- Rod - Transmission
- Rod Assy - Front Suspension
- Rod Assembly - Rear Suspension and Bracket
- Roll Stability Control
- Roller - Reverse Idler Gear
- Rotor and Plate - Power Steering Pump
- Reductant Lines
- Reductant Pump Assembly
- Reductant/Urea Tank Refrigerant Line
- Register Assembly - Heater
- Regulator - Front Door
- Regulator - Front Door L Window - Power
- Regulator - Front Door R Window - Power
- Regulator - Front Door Vent
- Regulator Assembly
- Regulator Assembly - EGR
- Relay - A/C Clutch
- Relay - Air Heater (Diesel)
- Relay - Forward Field
- Relay - Anti-skid
- Relay - Engine Cooling Fan
- Relay - Purge Valve
- Relay and Bracket Assembly
- Relay Assembly
- Relay Assembly - Brake Warning
- Relay Assembly A/C Blower Motor
- Relay Assembly Headlamp
- Relay Assembly Solenoid Vacuum Valve
- Relay Assembly Window Heater
- Relay Assembly/Turn Signal
- Relay Battery Saver - General Electronic Module
- Relay Bracket
- Relay Control
- Remote Control and Latch Assembly
- Reservoir - Brake M/C
- Reservoir - Brake Master Cylinder
- Reservoir Air Horn
- Reservoir and Outlet Tube Assembly
- Reservoir Assembly - EGR Valve
- Reservoir Assembly Vacuum
- Restrictor Fuel Vapor
- Ret Door Window Glass
- Return Assembly - Control Cable Bracket
- Ride Control Module
- Ring - Speed Sensor
- Ring - Transmission Synchronizer
- Rod - Clip/Slave Cylinder
- Rod - Transmission
- Rod Assy - Front Suspension
- Rod Assembly - Rear Suspension and Bracket
- Roll Stability Control
- Roller - Reverse Idler Gear
- Rotor and Plate - Power Steering Pump
- Reductant Lines
- Reductant Pump Assembly
- Reductant/Urea Tank Refrigerant Line
- Register Assembly - Heater
- Regulator - Front Door
- Regulator - Front Door L Window - Power
- Seal - A/C Inlet Door
- Seal - Brake Booster
- Seal - Camshaft Front
- Seal - Crankcase Separator
- Seal - Driveshaft Yoke Center
- Seal - Front Wheel Drive Inboard
- Seal - Front Wheel Hub
- Seal - Front/Rear Brake Hub
- Seal - Fuel Tank Filler
- Seal - Heater Core
- Seal - Housing Piston
- Seal - Hub Grease
- Seal - Intake Manifold
- Seal - Oil Pan Front
- Seal - Oil Pan Rear
- Seal - Oil Pump Body
- Seal - Outlet Fitting
- Seal - Parking Brake Shaft
- Seal - Power Steering Gear Input Shaft
- Seal - Rear Axle
- Seal - Rear Wheel Drive Inboard
- Seal - Rocker Arm Shaft
- Seal - Sector Shaft
- Seal - Steering Gear Valve
- Seal - Water Pump
- Seal - Window Regulator Switch
- Seal Assembly - Steering Column
- Seals - Integral Power Steering Gear
- Seals and Gaskets
- Seat Back Reclining Mechanism
- Seat Belt and Buckle Rear Seat
- Seat Position Center
- Seat Track Support Assembly
- Sender - Fuel Tank
- Sender - Oil Pressure
- Sender - Water Temp
- Sensor - ABS
- Sensor - Air Suspension Level
- Sensor - Air Temperature
- Sensor - Crank Timing
- Sensor - Front Suspension Level
- Sensor - Fuel Injector Pump
- Sensor - Low Coolant
- Sensor - Oil Temperature
- Sensor - Output Shaft
- Sensor - Parking Aid System
- Sensor - Rear Suspension Level
- Sensor - Shock Absorber
- Sensor - Skid Control
- Sensor - Sliding Door Actuator
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Separator Assembly - Fuel Vapor
- Servo Assembly - Automatic Temperature Control
- Shackle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and Bearing Assembly
- Shaft and CV Joint Assembly
- Shaft and Rack Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft Assembly - Lift
- Shaft Assembly - Transmission Input
- Shaft Bushing Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Front
- Shield - Parking Brake
- Shield - Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Shim A/C Compressor
- Skid Control Module Rear
- Sleeve - Bearing
- Sleeve - Front Stabilizer Bar
- Sleeve - Rear Stabilizer Bar
- Sleeve - Spacer Snap Ring
- Sleeve - Transmission Oil Pressure Boost
- Sleeve Assembly - Clutch Ad
- Sleeve Assembly - Rear Lube
- Sleeve/Ring Assembly Lockout
- Slide - Door Window Regulator
- Slide - Front/Rear Seat Track
- Slinger - Front/Rear Hub Oil
- Slip Yoke Assembly - Front Axle
- Snap Ring - Countershaft
- Snap Ring - Synchronizer
- Snap Ring - Transmission
- SMS and Transmission Assembly - Tire Press
- Socket - Instrument Panel Light
- Socket and Wire - Rear Left
- Socket Assembly - Auxiliary Electric Power
- Solenoid - Engine Timing
- Solenoid - Timing
- Solenoid - Luggage Door
- Solenoid - Press Regulator
- Solenoid - Regulator
- Solenoid - Transmission Downshift
- Solenoid - Vacuum Modulator
- Solenoid and Manifold Actuator
- Solenoid Assembly - Fuel
- Solenoid Assembly - Trans
- Sonic Plenum EGR Valve
- Spacer - Front Spring
- Spacer - Power Steering
- Spacer - Rear Spring
- Spacer - Transmission
- Spare Wheel Carrier
- Support Assembly - Drive
- Support Assembly - Trans
- Switch - A/C Comp Clutch
- Switch - A/C Pressure
- Switch - A/C Temperature Control
- Switch - Back-Up Light
- Switch - Brake Anti-Lock
- Switch - Brake Low Pressure
- Switch - Brake Pressure Warning
- Switch - Brake Traction Lock Control
- Switch - Coolant Temp
- Switch - Electrical Windshield Wiper
- Switch - Fuel Filter
- Switch - Ignition Anti-Theft
- Switch - Pressure Warning
- Switch - Temp Control
- Switch - Temp Control Valve
- Switch - Turn Indicator
- Switch - Vacuum Pump
- Switch and Bracket Assembly - Tailgate
- Switch Assembly - Brake Warning
- Switch Assembly - Door Ajar
- Switch Assembly - Door Lock
- Switch Assembly - Door Warning
- Switch Assembly - EGR
- Switch Assembly - Elect Shift
- Switch Assembly - Fuel Tank
- Switch Assembly - Gear Shift Neutral
- Switch Assembly - Lock Sensor
- Switch Assembly - Parking Brake
- Switch Assembly - Pressure
- Switch Assembly - Radio
- Switch Assembly - Rear Axle
- Switch Assembly - Speedometer
- Switch Assembly - Window Regulator
- SYNC® Module
- Synchronizer Assembly
- TCM (Transmission Control Module)
- Temperature Indicator
- Tensioner - Timing Chain
- Thermistor/Temperature Sensor Probe
- Thermostat Housing
- Throttle Valve Cable
- Thrust Bearing
- Tie Rods Inner/Outer
- Timing Chain Tensioner
- Timing Gear Set
- Torque Arm Assembly
- Torque Converter Assembly
- Torque Converter Pressure Valve
- Torque Converter Support
- Torsion Bar - Front
- Torsion Spring
- TPMS Sensor
- Track - Door Center
- Track Front/Rear Seat Inner
- Track Front/Rear Seat Strap
- Trailer Brake Module
- Transceiver - Passive Anti Theft
- Transducer - EGR
- Transducer - EGR Back Pressure
- Transducer - Hydraulic Pressure
- Transducer Assembly
- Transfer Case Assembly
- Transfer Case Encoder/Shift Motor
- Transmission - Actuator Assembly
- Transmission - Bearing
- Transmission - Case Cover
- Transmission - Control Pivot
- Transmission - Mount
- Transmission - Oil Cooler Line
- Transmission - Oil Pump
- Transmission - Sun Gear
- Transmitter Remote Control
- Trip Minder Assembly
- Tube - Fuel Injection
- Tube - Oil Level Indicator
- Tube - Turbo Air Outlet
- Tube - Turbo Oil Return
- Tube - Turbo Oil Supply
- Tube Air Suspension
- Tube Assembly - Oil Cooler
- Tube Vacuum Heat Valve
- Turbo Boost Gauge
- Turbo Discharge Pipe Gasket
- Turbocharger/Supercharger Unit - Factory-Installed
- Two Speed Shaft Repair
- U-bolt - Rear Spring
- U-bolt - Universal Joint
- Underbody Linkages and Couplings
- Universal Joint
- Vacuum Pump Gasket
- Vacuum Selector - Air Conditioner
- Valve - A/C Comp Low Pressure
- Valve - A/C Compressor Pressure
- Valve - Anti-Backfire
- Valve - Assembly H/L Cover
- Valve - Brake
- Valve - Brake Differential
- Valve - Brake Pressure Meter
- Valve - Brake Sensor
- Valve - Covers
- Valve - Door Vent
- Valve - EGR Vacuum Control
- Valve - Fuel Sender Check
- Valve - Guide
- Valve - Lube Connector
- Valve - Main Oil Pressure
- Valve - Throttle Center
- Valve - Throttle Pressure
- Valve - Transmission
- Valve Assembly - Brake
- Valve Assembly - Brake M/C
- Valve Assembly - Cooling Control
- Valve Assembly - Exhaust Air Sup
- Valve Assembly - Fan Thermostat Control
- Valve Assembly - Fuel Selector
- Valve Assembly - Fuel Tank Vent
- Valve Assembly - Main Control
- Valve Assembly - Master Cylinder Control
- Valve Assembly - Power Steering Control
- Valve Assembly - Thermal Vent
- Valve Assembly - Trans Control
- Valve Assembly - Vacuum Check
- Valve/Switch Assembly - Brake
- Vane Sensor
- Variable Assist Power Steering Module
- Variable Cam Timing Assembly
- Variable Camshaft Timing (VCT) Phasers
- Vehicle Emergency Messaging Module Assembly
- Vent - Rear Axle Housing
- Venturi A/C Evaporator
- Venturi Assembly A/C
- Viscous Coupler/Flexible Coupler
- Voltage Converter AC to DC
- Washer - Crankshaft Pulley
- Washer - Front Suspension Lower
- Water Bypass Pipe
- Water Outlet Connection
- Water Pump
- Wheel Cylinders
- Wheel Steering Assembly
- Window Crank Handle/Knob
- Windshield Wiper Motor
- Wiper Motor
- Wiper Motor Connector Grommet
- Wire - Power Steering Assist
- Wire - Speaker System
- Wire Assembly - Front/Rear Seat Control
- Wire Assembly - Neutral Switch
- Wire Assembly - RPM Sensor
- Wire Harness - A/C Fan
- Wire Harness - Air Conditioner
- Wiring - A/C Clutch
- Wiring - A/C Control Switch
- Wiring - Engine Loom
- Wiring - Exterior
- Wiring - Interior
- Wiring - Radio Amplifier

FORD PROTECT EXTENDED SERVICE PLANS							
PLAN	DESCRIPTION	FORD	COMPETITIVE-MAKE	TIME/MILEAGE	ROADSIDE ASSISTANCE	RENTAL	INTEREST-FREE FINANCING
PremiumCARE	1,000+ Components Covered	✓	✓	New Plans: up to the earlier of 8 years or 150,000 miles. Used Plans: up to the earlier of 72 months or 75,000 miles.	✓	Standard	✓
ExtraCARE	113 Components Covered	✓	✓	New Plans: up to the earlier of 8 years or 150,000 miles. Used Plans: up to the earlier of 72 months or 75,000 miles.	✓	Standard	✓
BaseCARE	84 Major Components Covered	✓	✓	New Plans: up to the earlier of 8 years or 150,000 miles. Used Plans: up to the earlier of 72 months or 75,000 miles.	✓	Standard	✓
PowertrainCARE	29 Critical Components Covered	✓	✓	New Plans: up to the earlier of 8 years or 150,000 miles. Used Plans: up to the earlier of 72 months or 75,000 miles.	✓	Standard	✓
CPO Upgrades	Exclusive Ford Protect Extended Service Plan Upgrades for Ford Certified Pre-Owned Vehicles	✓	■	A variety of time and mileage options up to the earlier of 11 years or 140,000 miles.	✓	Standard	✓

FORD PROTECT MAINTENANCE PLANS							
PLAN	DESCRIPTION	FORD	COMPETITIVE-MAKE	TIME/MILEAGE	ROADSIDE ASSISTANCE	RENTAL	INTEREST-FREE FINANCING
Premium/Extra Maintenance Plan	Covers routine inspections, preventive care, all scheduled maintenance, and replacement of select wear items	✓	✓	Plans available up to the earlier of 8 years or 150,000 miles.	■	Optional First-Day Rental	✓
Limited Maintenance Plan	Covers oil and filter change, tire rotation, Multi-point inspection, (DEF) top-off	✓	✓	A variety of time and mileage options up to the earlier of 6 years or 100,000 miles.	■	■	✓
Basic Maintenance Plan	Covers oil and filter change, tire rotation, Multi-point inspection	✓	✓	A variety of time and mileage options up to the earlier of 6 years or 100,000 miles.	■	■	✓
Engine Maintenance Plan	Covers oil and filter change	✓	✓	A variety of time and mileage options up to the earlier of 6 years or 100,000 miles.	■	■	✓

■ Not offered.

This brochure is intended to provide general information about extended service plans offered by Ford Protect. It was printed for the October 2022 plan year. Prices and plan details may have changed after the brochure was printed. Plan availability, benefits, coverage and provider may vary by state. Please refer to your plan's service contract for the actual terms and conditions.

In Florida, Ford Protect is a Service Contract from Ford Motor Service Company (License #19-383364381).

In Texas, Ford Protect is a Service Contract from Ford Motor Service Company (License #SCP-165).



