

<ul style="list-style-type: none"> <li>Insulator Rear Spring</li> <li>Insulator Stabilizer Assembly</li> <li>Insulator Steering Gear</li> <li>Insulator/Mount - Engine Block</li> <li>Intake Manifold Run</li> <li>Intake Manifold Support</li> <li>Inter Clutch Cylinder Assembly</li> <li>Intercooler</li> <li>Interior/Exterior Door Handle/Lever</li> <li>Intermediate Clutch - Piston</li> <li>Intermediate Clutch - Piston Seal</li> <li>Internal Separator Plate</li> <li>Inverter System Controller (ISC) (Hybrid)</li> <li>Joint Assembly - Front Suspension</li> <li>Joint Assembly - Front Suspension Lower</li> <li>Joint Assembly - Rear Axle Shaft</li> <li>Joint Assembly - Rear Suspension Lower</li> <li>Joint Assembly - Shifter Rod Front</li> <li>Knock Sensor</li> <li>Knuckle Assembly - Universal Joint</li> <li>Knuckle - Front Wheel</li> <li>Knuckle - Rear Wheel</li> <li>Lamp - Interior Pillar*</li> <li>Lamp Assembly - Transmission Control</li> <li>Lamp Outage Module</li> <li>Lane Depart Warning System</li> <li>Latch - Front/Rear Door</li> <li>Latch Front/Rear Seat Back</li> <li>Latch Rear Seat</li> <li>Latch Rear Seat Cushion</li> <li>LED (Light Emitting Diode) Lighting - Factory-Installed*</li> <li>Level Reverse Gear shaft</li> <li>Lever - Brake Shoe Adjuster</li> <li>Lever - Parking Brake</li> <li>Lever - Power Diff</li> <li>Lever Assembly - Down Shift</li> <li>Lever Assembly - Elect Shift</li> <li>Lever Brake Shoe Adjuster</li> <li>Lever Lumbar Support</li> <li>Lever Transfer Case Control</li> <li>Lift Assembly Hood</li> <li>Link Assembly - Stabilizer Bar</li> <li>Linkage and Bushings</li> <li>Load Leveler Suspension System</li> </ul>	<ul style="list-style-type: none"> <li>Lock Assembly - Steering</li> <li>Lock Assembly Rear Seat Back</li> <li>Locking Hub Assembly</li> <li>Lockout Hub Actuator Cam</li> <li>Lockout Hub Plate</li> <li>Logic Module Brake - Master Cylinder</li> <li>Lower Ball Joint - Front Axle</li> <li>Lower Piston Seal</li> <li>MacPherson Style Strut Front</li> <li>MacPherson Style Strut Rear</li> <li>Magnet Case Ceramic</li> <li>Main Bearing Thrust Washer</li> <li>Manifold - Vacuum Outlet</li> <li>Manifold Absolute Pressure Sensor</li> <li>Manifold and Thermostat</li> <li>Manifold and Tube Assembly</li> <li>Manifold and Valve Assembly</li> <li>Manifold Assembly - Fuel Supply</li> <li>Mass Air Flow Sensor</li> <li>Mass Air Flow/Intake Air Temp Sensor</li> <li>Master Assembly - Parking Brake Control</li> <li>Master Cylinder</li> <li>Master Cylinder Assembly</li> <li>Orifice - Forward Spring</li> <li>Metering Valve Assembly</li> <li>Microphone Assembly</li> <li>Mobile Phone Control Assembly</li> <li>Module - Brake Anti-Lock</li> <li>Module - Engine Control Relay</li> <li>Module - Fuel Pump Driver</li> <li>Module - Glow Plug Control</li> <li>Module - Parking Aid Control</li> <li>Module - Passive Restraint</li> <li>Module - Water Detection</li> <li>Module and Control Assembly</li> <li>Brake Anti-Lock</li> <li>Module Assembly - Aux Controls</li> <li>Module Assembly - Ignition</li> <li>Module Assembly - Multi-Function</li> <li>Module Assembly - Transmission Case</li> <li>Module Instrument Cluster</li> <li>Motor - Adjustable Pedal</li> <li>Motor and Drive Assembly</li> <li>Motor Assembly - Blower Heater</li> <li>Motor Assembly - Elect Shift</li> <li>Motor Assembly - Steering Column Release</li> </ul>	<ul style="list-style-type: none"> <li>Motor Assembly - Vacuum Controller</li> <li>Multispeed - Wiper Motor</li> <li>Navigation Antenna</li> <li>Noise Insulator</li> <li>Nox Sensor</li> <li>Nozzle - Defroster</li> <li>Nozzle - Windshield Washer</li> <li>Nozzle and Duct Heater Demis</li> <li>Nozzle Assembly - Fuel Injector</li> <li>Nozzle Window Defogger</li> <li>Nut Assembly Front Wheel Bearing</li> <li>Nut Steering Gear</li> <li>Odometer Assembly</li> <li>Oil Actuator Assembly</li> <li>Oil Cooler Transmission</li> <li>Oil Level Sensor</li> <li>Oil Pan</li> <li>Oil Pressure Sender</li> <li>Oil Pump</li> <li>Oil Pump Gear</li> <li>Oil Pump Housing</li> <li>Oil Seal - Output Seal</li> <li>Oil Seals - All Internal and External</li> <li>Oil Selector Main Control Valve</li> <li>Orifice - Power Steering Tube Seal</li> <li>O-ring - Locking Hub</li> <li>O-ring - Oil Cooler</li> <li>O-ring - Pressure Warning Switch</li> <li>O-ring - Suspension Air Spring Conn</li> <li>O-ring Solenoid</li> <li>Output Flange Ret Nut</li> <li>Output Shaft Bearing</li> <li>Output Shaft Seal</li> <li>Oxygen Sensor</li> <li>Pad - Brake and Clutch Pedal</li> <li>Panel Assembly Roof</li> <li>Parking Brake Cam Plate</li> <li>Parking Pawl</li> <li>Pawl Front/Rear Seat Back Latch</li> <li>Pawl Overdrive Shift</li> <li>PCM (Powertrain Control Module)</li> <li>PCV and Elbow Assembly</li> <li>PCV Tube</li> <li>Pedal Adjuster Assembly</li> <li>Pedal Assembly - Accelerator</li> <li>Pedal Assembly - Brake</li> <li>Pilot Assembly</li> </ul>	<ul style="list-style-type: none"> <li>Pin - Differential Pinion Shaft</li> <li>Pin - Door Hinge</li> <li>Pin - Piston</li> <li>Pin - Planetary Gear</li> <li>Pin - Steering Column</li> <li>Pin Lock - Rear Spring Shackle</li> <li>Pin Plate</li> <li>Pinion - Diff Spider</li> <li>Pinion - Brake Anti-lock</li> <li>Piston - Driveshaft Accumulator</li> <li>Piston - Front Servo</li> <li>Piston - Transmission Reverse</li> <li>Piston and Connecting Rod Assembly</li> <li>Piston Assembly - Brake Cylinder</li> <li>Piston Assembly - Transmission Reverse Clutch</li> <li>Piston Pin - Front Band</li> <li>Piston Ring</li> <li>Pivot - Front/Rear Seat Back</li> <li>Pivot Rear Seat Back</li> <li>Planetary Assembly - Transmission Rear</li> <li>Planetary Front</li> <li>Plate - Camshaft Thrust</li> <li>Plate - Coupling Shaft</li> <li>Plate - Differential Clutch</li> <li>Plate - Forward Clutch</li> <li>Plate - Gearshift Arm</li> <li>Plate - High-Speed Clutch</li> <li>Plate - Oil Level</li> <li>Plate - Oil Pan Baffle</li> <li>Plate - Transmission</li> <li>Plate Assembly - Clutch Release</li> <li>Plate Assembly - Diff Gear Clutch</li> <li>Plate Assembly - Engine Rear</li> <li>Plate Assembly - Transmission Oil Pump</li> <li>Plate Front Spring Clip</li> <li>Plate Front/Rear Brake Back</li> <li>Plate Rear Spring Clip</li> <li>Plate Vacuum Pump Mounting</li> <li>Plenum EGR - Signal Con</li> <li>Plug - Oil Pan</li> <li>Plug Assembly Trailer Lamp</li> <li>Plunger - Interlock</li> <li>Plunger - Oil Pump Valve</li> <li>Plunger - Transmission Shift</li> <li>Plunger/Sleeve - Shifter</li> <li>Positive Crankcase Ventilation (PCV) Valve</li> <li>Potentiometer A/C</li> <li>Potentiometer Assembly</li> </ul>	<ul style="list-style-type: none"> <li>Potentiometer Position Sensor</li> <li>Power Antenna</li> <li>Power Brake Booster Valve</li> <li>Power Brake Vacuum Motor</li> <li>Power Door Lock Actuator</li> <li>Power Door Locks and Retainer Clips</li> <li>Power Mirror Motor and Gears</li> <li>Power Regulator Rear Door</li> <li>Power Running Board bracket</li> <li>Power Steering Fluid Reservoir</li> <li>Power Steering Hose</li> <li>Power Steering Module and Bracket</li> <li>Power Steering Pressure Switch</li> <li>Power Steering Pump</li> <li>Power Steering Pump Seals</li> <li>Power Steering Pump Valve</li> <li>Pressure Relief Valve Cap</li> <li>Pressure Transducer</li> <li>Primary Sun Gear</li> <li>Processor Assembly - Regulator On</li> <li>Processor Assembly - Regulator On</li> <li>PTO Assembly</li> <li>Pulley - Alternator</li> <li>Pulley - Belt Idler</li> <li>Pulley - Water Pump</li> <li>Pulley and Bracket - Fan Assembly - Fan</li> <li>Pulley Assembly - Belt Idler</li> <li>Pulley Assembly - Brake Vacuum Pump</li> <li>Pulley Assembly - Fan belt</li> <li>Pulley Fan</li> <li>Pump - Front/Rear/Seat Pad Adjuster</li> <li>Pump - Windshield Washer</li> <li>Pump and Regulator Assembly</li> <li>Pump Assembly - Brake Vacuum</li> <li>Pump Assembly Ex Air Supply</li> <li>Purge Regulation Valve</li> <li>Race and Bushing Assembly</li> <li>Rack Assembly - Steering Gear</li> <li>Radiator Assembly</li> <li>Radiator Tank Inlet Assembly</li> <li>Rail Roof Sliding Panel</li> <li>Rear Anti-lock Braking Valve</li> <li>Rear Axle Bearing</li> <li>Rear Axle Seal</li> <li>Rear Brake Lever</li> <li>Rear Brake Shoe Pin</li> </ul>	<ul style="list-style-type: none"> <li>Reservoir - Brake M/C</li> <li>Reservoir - Brake Master Cylinder</li> <li>Reservoir Air Horn</li> <li>Reservoir and Outlet Tube Assembly</li> <li>Reservoir Assembly - EGR Valve</li> <li>Reservoir Assembly Vacuum</li> <li>Reservoir Brake - Master Cylinder</li> <li>Restrictor Fuel Vapor</li> <li>Ret Door Window Glass</li> <li>Return Assembly - Control Cable Bracket</li> <li>Ride Control Module</li> <li>Ring - Speed Sensor</li> <li>Ring - Transmission Synchronizer</li> <li>Rod - Clip/Slave Cylinder</li> <li>Rod - Transmission</li> <li>Rod Assembly - Front Suspension</li> <li>Rod Assembly - Rear Suspension</li> <li>Rod Assembly - Transmission</li> <li>Roller - Reverse Idler Gear</li> <li>Rotor and Plate - Power Steering Pump</li> <li>Running Board Motor</li> <li>Screen - Oil Pump</li> <li>Screen Assembly</li> <li>Screw - Modulator Pump</li> <li>Seal - A/C Condenser</li> <li>Seal - A/C Door</li> <li>Seal - A/C Inlet Door</li> <li>Seal - Brake Valve</li> <li>Seal - Camshaft Front</li> <li>Seal - Crankcase Separator</li> <li>Seal - Driveshaft Yoke Center</li> <li>Seal - Front Wheel Drive Inboard</li> <li>Seal - Front Wheel Hub</li> <li>Seal - Front/Rear Brake Hub</li> <li>Seal - Fuel Tank Filler</li> <li>Seal - Heater Core</li> <li>Seal - Housing Piston</li> <li>Seal - Hub Grease</li> <li>Seal - Intake Manifold</li> <li>Seal - Oil Pan Front</li> <li>Seal - Oil Pan Rear</li> <li>Seal - Oil Pump Body</li> <li>Seal - Outlet Fitting</li> <li>Seal - Parking Brake Shaft</li> </ul>	<ul style="list-style-type: none"> <li>Seal - Power Steering Gear Input Shaft</li> <li>Seal - Rear Axle</li> <li>Seal - Rear Wheel Drive Inboard</li> <li>Seal - Rocker Arm Shaft</li> <li>Seal - Sector Shaft</li> <li>Seal - Steering Gear Valve</li> <li>Seal - Water Pump</li> <li>Seal - Window Regulator</li> <li>Seal Assembly - Steering Column</li> <li>Seals - Integral Power Steering Gear</li> <li>Seals and Gaskets</li> <li>Seat Back Reclining Mechanism</li> <li>Seat Belt and Buckle Rear Seat</li> <li>Seat Position Center</li> <li>Seat Track Support Assembly</li> <li>Sender - Fuel Tank</li> <li>Sender - Oil Pressure</li> <li>Sender - Water Temp</li> <li>Sensor - ABS</li> <li>Sensor - Air Suspension Level</li> <li>Sensor - Air Temperature</li> <li>Sensor - Crank Timing</li> <li>Sensor - Front Suspension Level</li> <li>Sensor - Fuel Injector Pump</li> <li>Sensor - Low Coolant</li> <li>Sensor - Oil Temperature</li> <li>Sensor - Output Shaft</li> <li>Sensor - Parking Aid System</li> <li>Sensor - Rear Suspension Level</li> <li>Sensor - Shock Abs</li> <li>Sensor - Shock Absorber</li> <li>Sensor - Skid Control</li> <li>Sensor - Sliding Door Actuator</li> <li>Sensor - Speed Brake</li> <li>Sensor - Speedometer</li> <li>Sensor - Temp Coolant</li> <li>Sensor - Transmission Oil Temperature</li> <li>Sensor - Turbine Speed</li> <li>Sensor and Bracket Assembly Front/Rear</li> <li>Sensor Assembly - Camshaft</li> <li>Sensor Assembly - EGR Solenoid</li> <li>Sensor Assembly - Elect Control Cooler Temp</li> <li>Sensor Assembly - Engine Misfire Detector</li> </ul>	<ul style="list-style-type: none"> <li>Sensor Assembly - Message Center</li> <li>Sensor Assembly - Rear Bracket</li> <li>Sensor Assembly - RR Bracket Anti-Lock</li> <li>Sensor Assembly - Tire Pressure</li> <li>Sensor Assembly - Yaw Control</li> <li>Separator Assembly - CC Vent</li> <li>Separator Assembly - Fuel Vapor</li> <li>Servo Assembly - Automatic Temperature Control</li> <li>Shackle Assembly Rear Spring</li> <li>Shaft - A/C Door</li> <li>Shaft - Actuating Level</li> <li>Shaft - Brake Pedal</li> <li>Shaft - Differential</li> <li>Shaft - Gear Shifter</li> <li>Shaft - Manual Control</li> <li>Shaft - Output</li> <li>Shaft - Power Steering Pump Rotor</li> <li>Shaft - Shift Accumulator</li> <li>Shaft - Steering To Column</li> <li>Shaft and Bearing - Water Pump</li> <li>Sensor - Front Suspension Level</li> <li>Sensor - Fuel Injector Pump</li> <li>Sensor - Low Coolant</li> <li>Sensor - Oil Temperature</li> <li>Sensor - Output Shaft</li> <li>Sensor - Parking Aid System</li> <li>Sensor - Rear Suspension Level</li> <li>Sensor - Shock Abs</li> <li>Sensor - Shock Absorber</li> <li>Sensor - Skid Control</li> <li>Sensor - Sliding Door Actuator</li> <li>Sensor - Speed Brake</li> <li>Sensor - Speedometer</li> <li>Sensor - Temp Coolant</li> <li>Sensor - Transmission Oil Temperature</li> <li>Sensor - Turbine Speed</li> <li>Sensor and Bracket Assembly Front/Rear</li> <li>Sensor Assembly - Camshaft</li> <li>Sensor Assembly - EGR Solenoid</li> <li>Sensor Assembly - Elect Control Cooler Temp</li> <li>Sensor Assembly - Engine Misfire Detector</li> </ul>	<ul style="list-style-type: none"> <li>Sleeve Assembly - Clutch Ad</li> <li>Sleeve Assembly - Rear Lube</li> <li>Sleeve/Ring Assembly Lockout</li> <li>Slide - Door Window Regulator</li> <li>Slide - Front/Rear Seat Track</li> <li>Slinger - Front/Rear Hub Oil</li> <li>Slip Yoke Assembly - Front Axle</li> <li>Snap Ring - Countershaft</li> <li>Snap Ring - Synchronizer</li> <li>Snap Ring - Transmission</li> <li>SNS and Transmission Assembly - Tire Press</li> <li>Socket - Instrument Panel Light</li> <li>Socket and Wire - Rear Left</li> <li>Socket Assembly - Auxiliary Electric Power</li> <li>Solenoid - Engine Timing</li> <li>Solenoid - Engine</li> <li>Solenoid - Luggage Door</li> <li>Solenoid - Press Regulator</li> <li>Solenoid - Regulator</li> <li>Solenoid - Transmission Downshift</li> <li>Solenoid - Vacuum Modulator</li> <li>Spacer - Power Steering</li> <li>Spacer - Rear Spring</li> <li>Spacer - Transmission</li> <li>Spare Wheel Carrier Lift Assembly</li> <li>Speaker - Assembly</li> <li>Speaker - Parking Aid Control</li> <li>Speedograph/Tachograph</li> <li>Speedometer Assembly</li> <li>Spindle - Nut and Bearing</li> <li>Spindle and Spindle Support Springs</li> <li>Spindle Assembly</li> <li>Spindle Nut Assembly</li> <li>Spring - Camshaft Plunger</li> <li>Spring - Differential Clutch</li> <li>Spring - Door Latch</li> <li>Spring - Front Suspension Torsion</li> <li>Spring - Gear Tensioner</li> <li>Spring - Leaf Rear</li> <li>Spring - Overrunning Clip</li> <li>Spring - Parking Pawl</li> </ul>	<ul style="list-style-type: none"> <li>Spring - Rear Suspension Torsion</li> <li>Spring - Reverse Inhibitor</li> <li>Spring - Shift Bias</li> <li>Spring - Tran G/Shift Lever</li> <li>Spring - Front/Rear Front</li> <li>Spring Assembly - Rear Springs Slipper</li> <li>Sprocket - Crankshaft</li> <li>Sprocket - Lock Ring</li> <li>Start/Stop Push Button Switch</li> <li>Starter Motor Assembly</li> <li>Starter Motor Solenoid</li> <li>Stationary Elevated Ride Control</li> <li>Steering Actuator Valve</li> <li>Steering Column Assembly</li> <li>Steering Column Lock Actuator</li> <li>Steering Column Lock Assembly</li> <li>Steering Stop</li> <li>Steering Wheel Controls</li> <li>Steering Worm Bearing Cup</li> <li>Stem A/C Clutch Switch</li> <li>Stop Assembly Rear Seat Back</li> <li>Striker Rear Seat Latch</li> <li>Strut - Front Suspension Lower</li> <li>Subwoofer Assembly</li> <li>Suction/Discharge Assembly</li> <li>Sunload Sensor</li> <li>Support - Coupling Shaft Bearing</li> <li>Support - Exhaust Pump</li> <li>Support - Front/Rear Seat</li> <li>Support - Front/Rear Seat Belt Buckle</li> <li>Support - Rocker Arm</li> <li>Support - Turbocharger</li> <li>Support Arm Assembly</li> <li>Support Assembly - Drive</li> <li>Support Assembly - Trans</li> <li>Switch - A/C Comp Clutch</li> <li>Switch - A/C Pressure</li> <li>Switch - A/C Temperature Control</li> <li>Switch - Back-Up Light</li> <li>Switch - Brake Anti-Lock</li> <li>Switch - Brake Low Press</li> <li>Switch - Brake Pressure Warning</li> <li>Switch - Brake Traction Lock Control</li> <li>Switch - Coolant Temp</li> <li>Switch - Electrical Windshield Wiper</li> </ul>	<ul style="list-style-type: none"> <li>Transducer - EGR</li> <li>Transducer - EGR Back Pressure</li> <li>Transducer - Hydraulic Pressure</li> <li>Transducer Assembly</li> <li>Transfer Case Assembly</li> <li>Transfer Case Encoder/Shift Motor</li> <li>Transmission - Actuator Assembly</li> <li>Transmission - Bearing</li> <li>Transmission - Case Cover</li> <li>Transmission - Control Pivot</li> <li>Transmission - Mount</li> <li>Transmission - Oil Cooler Line</li> <li>Transmission - Oil Pump</li> <li>Transmission - Sun Gear</li> <li>Transmitter Remote Control</li> <li>Tube - Clutch</li> <li>Tube - Fuel Injection</li> <li>Tube - Oil Level Indicator</li> <li>Tube - Turbo Air Outlet</li> <li>Tube - Turbo Oil Return</li> <li>Tube - Turbo Oil Supply</li> <li>Tube Air Suspension</li> <li>Tube Assembly - Oil Cooler</li> <li>Tube Vacuum Heat Valve</li> <li>Turbo Boost Gauge</li> <li>Turbo Discharge Pipe Gasket</li> <li>Turbocharger/Supercharger Unit - Factory-Installed</li> <li>Two Speed Shaft Repair</li> <li>U-bolt - Rear Spring</li> <li>U-bolt - Universal Joint</li> <li>Underbody Linkages and Couplings</li> <li>Universal Joint</li> <li>Vacuum Pump Gasket</li> <li>Vacuum Selector - Air Conditioner</li> <li>Valve - A/C Comp Low Pressure</li> <li>Valve - A/C Compressor Pressure</li> <li>Valve - Anti-Backfire</li> <li>Valve - Assembly H/L Cover</li> <li>Valve - Brake Pressure Differential</li> <li>Valve - Brake Pressure Meter</li> <li>Valve - Brake Sensor</li> <li>Valve - Covers</li> <li>Valve - Door Vent</li> <li>Valve - EGR Vacuum Control</li> <li>Valve - Fuel Sender Check</li> </ul>	<ul style="list-style-type: none"> <li>Valve - Guide</li> <li>Valve - Lube Connector</li> <li>Valve - Main Oil Pressure</li> <li>Valve - Throttle Center</li> <li>Valve - Throttle Pressure</li> <li>Valve - Transmission</li> <li>Valve Assembly - Air Bypass</li> <li>Valve Assembly - Brake</li> <li>Valve Assembly - Cooling Control</li> <li>Valve Assembly - Exhaust Air Sup</li> <li>Valve Assembly - Fan Thermostat Control</li> <li>Valve Assembly - Fuel Selector</li> <li>Valve Assembly - Fuel Tank Vent</li> <li>Valve Assembly - Main Control</li> <li>Valve Assembly - Master Cylinder Control</li> <li>Valve Assembly - Power Steering Control</li> <li>Valve Assembly - Thermal Vent</li> <li>Valve Assembly - Trans Control</li> <li>Valve Assembly - Vacuum Check</li> <li>Valve/Switch Assembly - Brake</li> <li>Vane Sensor</li> <li>Variable Assist Power Steering Module</li> <li>Variable Cam Timing Assembly</li> <li>Variable Camshaft Timing (VCT) Phasers</li> <li>Vehicle Emergency Messaging Module Assembly</li> <li>Vent - Rear Axle Housing</li> <li>Venturi A/C Evaporator</li> <li>Venturi Assembly A/C</li> <li>Viscous Coupler/Flexible Coupler</li> <li>Voltage Converter AC to DC</li> <li>Washer - Crankshaft Pulley</li> <li>Washer - Front Suspension Lower</li> <li>Water By-Pass Pipe</li> <li>Water Outlet Connection</li> <li>Water Pump</li> <li>Wheel Cylinders</li> <li>Wheel Steering Assembly</li> <li>Window Crank Handle/Knob</li> <li>Windshield Wiper Motor</li> <li>Wiper Motor</li> <li>Connector Grommet</li> <li>Wire - Power Steering Assist</li> <li>Wire - Speaker System</li> </ul>	<ul style="list-style-type: none"> <li>Wire Assembly - Front/Rear Seat Control</li> <li>Wire Assembly - Neutral Switch</li> <li>Wire Assembly - RPM Sensor</li> <li>Wire Harness - A/C Fan</li> <li>Wire Harness - Air Conditioner</li> <li>Wiring - A/C Clutch</li> <li>Wiring - A/C Control Switch</li> <li>Wiring - Engine Loom</li> <li>Wiring - Exterior</li> <li>Wiring - Interior</li> <li>Wiring - Radio Amplifier</li> <li>Wiring Assembly - A/C Blower Motor Feed</li> <li>Wiring Assembly - Brake Skid</li> <li>Wiring Assembly - Interior/Engine/Exterior</li> <li>Wiring Assembly - Radio</li> <li>Worm - Parking Brake</li> <li>Yoke - Driveshaft Center</li> <li>Yoke - Shaft Support</li> <li>Yoke - Universal</li> </ul>
---	--	--	---	---	---	---	---	---	---	--	--	---

LINCOLN PROTECT EXTENDED SERVICE PLANS							
PLAN	DESCRIPTION	LINCOLN	COMPETITIVE-MAKE	TIME/MILEAGE	ROADSIDE ASSISTANCE	RENTAL	INTEREST-FREE FINANCING
PremiumCARE	1,000+ Components Covered	✓	✓	New Plans: up to the earlier of 8 years or 150,000 miles. Used Plans: up to the earlier of 72 months or 75,000 miles.	✓	Standard	✓
ExtraCARE	113 Components Covered	✓	✓	New Plans: up to the earlier of 8 years or 150,000 miles. Used Plans: up to the earlier of 72 months or 75,000 miles.	✓	Standard	✓
BaseCARE	84 Major Components	✓	✓	New Plans: up to the earlier of 8 years or 150,000 miles. Used Plans: up to the earlier of 72 months or 75,000 miles.	✓	Standard	✓
PowertrainCARE	29 Critical Components	✓	✓	New Plans: up to the earlier of 8 years or 150,000 miles. Used Plans: up to the earlier of 72 months or 75,000 miles.	✓	Standard	✓
CPO Upgrades	Exclusive Lincoln Extended Service Plan Upgrades for Lincoln Certified Pre-Owned Vehicles	✓	■	A variety of time and mileage options up to the earlier of 11 years or 140,000 miles.	✓	Standard	✓

LINCOLN PROTECT MAINTENANCE PLANS							
PLAN	DESCRIPTION	LINCOLN	COMPETITIVE-MAKE	TIME/MILEAGE	ROADSIDE ASSISTANCE	RENTAL	INTEREST-FREE FINANCING
Premium/Extra Maintenance Plan	Covers routine inspections, preventive care, all scheduled maintenance, and replacement of normal wear items	✓	✓	Plans available up to the earlier of 8 years or 150,000 miles.	■	Optional First-Day Rental	✓
Limited Maintenance Plan	Covers oil and filter change, tire rotation, Multi-point inspection, (DEF) top-off	✓	✓	A variety of time and mileage options up to the earlier of 6 years or 100,000 miles.	■	■	✓
Basic Maintenance Plan	Covers oil and filter change, tire rotation, Multi-point inspection	✓	✓	A variety of time and mileage options up to the earlier of 6 years or 100,000 miles.	■	■	✓
Engine Maintenance Plan	Covers oil and filter change	✓	✓	A variety of time and mileage options up to the earlier of 6 years or 100,000 miles.	■	■	✓

■ Not offered.



This brochure is intended to provide general information about extended service plans offered by Lincoln Protect. It was printed for the October 2020 plan year. Prices and plan details may have changed after the brochure was printed. Plan availability, benefits, coverage and provider may vary by state. Please refer to your plan's service contract for the actual terms and conditions.

**In Florida, Lincoln Protect on Lincoln vehicles is a Service Contract from Ford Motor Company (License #12118). Lincoln Protect on competitive-make vehicles is a Service Contract from The American Road Insurance Company, Dearborn, MI 48126 (Certificate of Authority #09079).**

**In Texas, Lincoln Protect is a Service Contract from Ford Motor Service Company (License #SCP-165).**



# Premium/Extra Maintenance Plan

# PowertrainCARE 29 Covered Components

# BaseCARE 84 Covered Components

# ExtraCARE 113 Covered Components

# PremiumCARE 1,000+ Covered Components (Partial List)

Our most comprehensive maintenance plan covers:

- Engine Oil and Filter Changes
- Multi-Point Inspections
- Tire Rotations
- Replacement of Brake Pads and Linings When Worn
- Shock Absorbers/Struts
- Spark Plugs
- Clutch Discs
- Engine Belts
- Wiper Blades
- Diesel Exhaust Fluid Fill at the Time Scheduled Maintenance Is Performed at Dealership (If Necessary)

# Essential Maintenance Plans

Plan ahead now and protect yourself against rising maintenance costs with this affordable array of standard service items for your vehicle:

- Limited Maintenance covers lube/oil/filter, tire rotation, diesel exhaust fluid refill at service interval, multi-point inspection
- Basic Maintenance covers lube/oil/filter, tire rotation, multi-point inspection
- Engine Maintenance covers lube/oil/filter only

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Spark Plugs
- Clutch Discs
- Engine Belts
- Wiper Blades
- Diesel Exhaust Fluid Fill at the Time Scheduled Maintenance Is Performed at Dealership (If Necessary)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case (Including All Internal Parts)
- Turbocharger/Supercharger Unit (Factory-Installed)
- Universal and Constant Velocity Joints (Front- and Rear-Wheel-Drive Axle)
- Valve Covers
- Viscous Coupler/Flexible Coupler
- Water Pump

- A/C Clutch
- A/C Clutch Bearings
- A/C Compressor
- A/C Compressor Clutch Switch
- A/C Compressor Head
- A/C Compressor Seals
- A/C Condenser
- A/C Evaporator
- A/C Field Coil
- A/C Pulley
- All Internally Lubricated Parts (Engine)
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Ball Joints – Upper and Lower (Front Suspension)
- Brake Booster (Power)
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Radiator Fan Relay
- Calipers (Brake)
- Column Lock (Tilt Wheel)
- Combination Valve (Brakes)
- Control Arms (Lower)
- Control Arms (Upper)
- Seals and Gaskets (Steering)
- Control Valve (Steering)
- Cooler and Metal Lines (Steering)
- Cylinder Block
- Cylinder Heads
- Diesel Injector Pump
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Electronic Ignition Module
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Fuel Pump
- Harmonic Balancer and Bolt

- Heated Backglass (Electrical Only – Not Glass Damage or Breakage)
- Idler Arm
- Ignition Switch
- Intake (Manifold and Bolts)
- Linkage and Bushings (Front & Rear Suspension)
- Locking Rings (Four-Wheel Drive)
- MacPherson Style Struts (Front)
- Master Cylinder
- Metal Fuel Lines (Engine)
- Metal Lines and Fittings (Brakes)
- Oil Pan
- Oil Pump
- Parking Brake Cables
- Parking Brake Linkages
- Power Steering Pump/Electric Power Steering Actuator
- Pulley Assembly (Power Steering Pump)
- Radiator Fan Relay
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Drive Axles)
- Control Arm Shafts & Bushings
- Seals and Gaskets (Transmission)
- Self-Adjusters (Brakes)
- Shaft (Brake Pedal)
- Speedometer/Odometer (Electrical & Mechanical)
- Spindle and Spindle Supports (Front Suspension)
- Springs (Brakes)
- Cooler and Metal Lines (Steering)
- Starter Motor
- Starter Motor Solenoid
- Steering Gear Housing, Manual and Power (Including All Internal Parts)
- Switches (Manually Operated Electrical)
- Thermostat (Engine)

- Thermostat Housing (Engine)
- Tie Rods (Front Suspension)
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- A/C Compressor Seals
- A/C Condenser
- A/C Evaporator
- A/C Field Coil
- A/C Pulley
- All Internally Lubricated Parts (Engine)
- Locking Rings (Four-Wheel Drive)
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages and Couplings
- Universal and Constant Velocity Joints (Front- and Rear-Wheel-Drive Axles)
- Valve Covers
- Viscous Coupler/Flexible Coupler
- Voltage Regulators
- Water Pump
- Wheel Cylinders (Brakes)
- Wiper Motors
- Wiring Harnesses (Excluding Spark Plug Wires)
- Automatic Temperature Control
- Axle Shafts (Front- and Rear-Wheel-Drive Axles)
- Ball Joints (Upper & Lower)
- Brake Booster (Power)
- Calipers (Brakes)
- Column Lock (Tilt Wheel)
- Combination Valve (Brakes)
- Control Arms (Upper)
- Control Arms (Lower)
- Control Arm Shafts & Bushings (Front Suspension)
- Control Valve (Steering)
- Cooler and Metal Lines (Steering)
- Cylinder Block
- Cylinder Heads
- Diesel Injector Pump
- Drive Axle Housing & Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Electronic Ignition Module
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Fuel Pump
- Harmonic Balancer and Bolt

- A/C Accumulator
- A/C Clutch
- A/C Clutch Bearings
- A/C Compressor
- A/C Compressor Clutch Switch
- A/C Compressor Head
- A/C Compressor Seals
- A/C Condenser
- A/C Evaporator
- A/C Field Coil
- A/C Pulley
- Adaptive Cruise Control
- Air Suspension (Selected Electronic Components)
- All Internally Lubricated Parts (Engine)
- All Internally Lubricated Parts (Transmission)
- Alternator
- Anti-Lock Brake Module & Sensor
- Automatic Temperature Control
- Axle Shafts (Front- and Rear-Wheel-Drive Axles)
- Ball Joints (Upper & Lower)
- Brake Booster (Power)
- Calipers (Brakes)
- Column Lock (Tilt Wheel)
- Combination Valve (Brakes)
- Shaft (Brake Pedal)
- Control Arms (Lower)
- Control Arm Shafts & Bushings (Front Suspension)
- Control Valve (Steering)
- Cooler & Metal Lines (Steering)
- Cylinder Block
- Cylinder Heads
- Diesel Fuel Injectors
- Adjuster - Differential Bearing
- Diesel Injector Pump
- Diesel Lift Pump
- Drive Axle Housing & Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- ETA Pump Hose Assembly
- Electronic Ignition Module
- Engine Mounts
- Exhaust (Manifold and Bolts)

- Final Drive Housing & Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Flywheel Ring Gear
- Fuel Pump
- Fuel Tank and Metal Lines
- Gas Fuel Injectors
- Gas Injector Lines
- Harmonic Balancer & Bolt
- Heated Back Glass (Electrical Only - No Glass Damage or Breakage)
- Heater Blower Motor
- Heater Control Assembly
- Heater Core Assembly
- Idler Arm (Steering)
- Ignition Switch
- Instrument Cluster, Electronic (Excluding Dash Pad, Clock, Audio and Visual Equipment)
- Intake (Manifold and Bolts)
- Keyless Entry System (Excluding Door Handles)
- Linkage and Bushings (Front Suspension)
- Locking Rings (Four-Wheel Drive)
- MacPherson Style Struts (Front Suspension)
- Master Cylinder
- Metal Lines and Fittings (Brakes)
- Oil Pan
- Oil Pump
- Parking Brake Linkage & Cables
- Power Antenna
- Power Door Locks & Retainer Clips (Excluding Door Handles)
- Power Seat Motors
- Power Steering Pump/Electric Power Steering Actuator
- Power Window Motors
- Power Window Regulators
- Pulley Assembly (Steering)
- Radiator
- Radiator Fan (Clutch or Motor)
- Radiator Fan Relay
- Seals & Gaskets (Engine)
- Seals & Gaskets (Transmission)

- Seals & Gaskets (Front- and Rear-Wheel-Drive Axles)
- Seals & Gaskets (Steering)
- SecuriCode™ Keyless Entry
- Self Adjusters (Brakes)
- Band (Brake Pedal)
- Speedometer
- Speedometer/Odometer (Electrical and Mechanical)
- Spindle & Spindle Supports
- Springs (Brakes)
- Stabilizer Bar
- Starter Motor
- Starter Motor Solenoid
- Steering Gear Housing, Manual and Power (Including All Internal Parts)
- Switches (Manually Operated Electrical)
- Thermostat (Engine)
- Thermostat Housing (Engine)
- Tie Rods (Front Suspension)
- Timing Chain Cover
- Timing Chain (Gears or Belt)
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Transmission Module, External
- Transmission Mounts
- Transmission Vacuum Module
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages & Couplings (Steering)
- Universal & Constant Velocity Joints
- Valve Covers (Engine)
- Viscous Coupler/Flexible Coupler
- Voltage Regulator
- Water Pump
- Wheel Cylinders (Brakes)
- Wiper Motors
- Wiring Harnesses (Excluding Spark Plug Wires)

- A/C Accumulator
- A/C Actuator
- A/C Compressor
- A/C Compressor Assembly
- A/C Compressor Seals
- A/C Control Head
- A/C Line Assembly
- GAS Module
- ABS Sensor and Bracket
- Absorber - Steering Shaft
- Accumulator - Body Control Assembly
- Accumulator - Piston
- Actuator - Front/Rear Door Latch
- Actuator - Neutral Switch
- Actuator - Power Steering Valve
- Actuator - Steering Column Lock
- Actuator Assembly
- Actuator Assembly - Front Suspension
- Actuator Assembly - Rear Door
- Actuator Assembly - Rear Suspension
- Actuator Assembly - TV Console
- Actuator Assembly - Steering Column
- Actuator Module - Safety Restraint
- Actuator Parking Brake Switch
- Actuator Shift Lock
- Adapter Spark Knock
- Adaptive Cruise Control
- Adjuster - Differential Bearing
- Adjuster - Door Lock
- Adjuster - Front/Rear Seat Buckle
- Adjuster - Torsion Bar
- Adjuster Assembly - Front/Rear Seat
- Adjuster Assembly - Steering Worm
- Airbag Smart Sensor Assembly
- Air Conditioner Clutch Pulley
- Air Conditioner Wiring Assembly
- Air Control Valve
- Air Idle Vacuum Valve
- Air Intake Ducting

- Air Pump Muffler
- Air Reservoir Tank Assembly
- Air Spring Solenoid
- Air Suspension Compressor Assembly
- Air Suspension Dryer Assembly
- Air Suspension Lines
- Air Suspension Quick Connect
- Alternator
- Alternator Assembly
- Alternator Rotor
- AM/FM Receiver
- Ambient Sensor
- Ammeter - Alternator
- Amplifier Assembly
- Amplifier Assembly A/C
- Amplifier Assembly EGR Valve
- Anchor Push Rod
- Bearing Assembly - Air Suspension Compressor
- Anti-Lock Brake Sensor
- Anti-Skid Brake Module
- Anti-Theft Alarm - Factory-Installed
- Arm - Steering Pitman
- Arm and Bushing Assembly - Front Suspension
- Arm and Bushing Assembly - Rear Suspension
- Arm and Pivot Shaft Assembly - Windshield Wiper
- Arm Assembly - Selector Plate
- Arm Assembly - Windshield Wiper
- Arm Bushing Front Suspension
- Arm Bushing Rear Suspension
- Arm Steering Assembly - Steering Idler
- Armature - Windshield Wiper Motor
- Armature Sensor Motor Assembly
- Assembly Parking Brake Cable Adjuster
- Auxiliary Heater Assembly
- Axle Assembly - Clutch
- Axle Assembly - Rear
- Axle Shaft Assembly
- Back-Up Siren/Alarm Assembly
- Baffle - Input Shaft
- Baffle - Output Shaft
- Balance Shaft Assembly

- Ball Joint Assembly - Upper/Lower
- Ballast - Hi-Mount Stop Lamp
- Band - Front
- Band - Rear
- Band - Transmission Reverse
- Band Assembly - Transmission Intermediate
- Barometric and Map Sensor
- Barometric Pressure Sensor
- Bearing - Coupling Shaft
- Bearing - Differential Adjuster
- Bearing - Front Axle
- Bearing - Parking Brake
- Bearing - Reverse Idler
- Bearing - Worm Gear
- Bearing Assembly - A/C Comp Clutch
- Bearing Assembly - Air Comp
- Bearing Assembly - Air Suspension Compressor
- Bearing Assembly - Elect Shift
- Bearing Assembly - Rear Wheel
- Bearing Assembly - Spindle
- Bearing Cup Front Wheel
- Bearing Front Wheel
- Bearing Seal Front Suspension
- Bearings - All Internally Lubricated
- Belt Assembly Center Pass
- Cap - Rad/O/Flow Control
- Cap - Reservoir
- Cap - Water Outlet
- Cap Assembly – Master Cylinder
- Cap Assembly - Radiator
- Capacitor Assembly - Alternator
- Carrier - Rear Axle
- Carrier Assembly - Differential
- Carrier Assembly - OD Planetary Gear
- Case - A/C Evaporator
- Case Assembly - Differential
- Case Assembly - Power Divider
- Case Differential Gear Support
- Cellular Phone/Receiver/Handset/Speaker Assembly
- Chain Timing
- Chassis Radio
- Child Seat Belt

- Brake - Engine to Transmission
- Bracket A/C Comp Mounting
- Bracket A/C Condenser Mt
- Bracket A/C Hose
- Bracket Assembly - Front Shock
- Bracket Assembly - Front/Rear Seat Side Armrest Mounting
- Bracket Assembly - Rear Shock
- Bracket Assembly - Rear Axle Damper
- Bracket for Radius Arm
- Bracket Rear Door Glass
- Bracket Stabilizer Bar Link
- Brake Adjuster Screw
- Brake Adjuster Spring
- Brake and Clutch M/C Bushing
- Brake Booster Control
- Brake Caliper Support
- Brake Line - Metal
- Brake Master Cylinder Assembly
- Brake Master Cylinder Gasket
- Brake Master Cylinder Seal
- Brake Master Cylinder Switch
- Brake Pressure Accumulator
- Brake Shoe Adjuster Nut
- Brake Shoe Anchor Pin
- Brake Shoe Hold Cup
- Brake Shoe Hold Spring
- Brake Vacuum Booster Seal
- Brake Wiring Assembly
- Brush and Spring - Alternator
- Bumper - Front Axle
- Bumper - Rear Axle
- Bushing - All Internal and External
- Bushing - Brake Pedal
- Bushing - Connecting Rod
- Bushing - Door Hinge
- Bushing - Front Lower Arm
- Bushing - Front Suspension
- Bushing - Front Suspension Lower Arm
- Bushing - Front Suspension Upper
- Bushing - Front/Rear Seat Adjuster
- Bushing - Front/Rear Seat Track

- Cigar Lighter Assembly
- Clamp - Transmission Gear Shift Lever
- Clip – Brake Shoe Locator
- Clock Assembly
- Clutch and Pulley - Air Conditioner
- Clutch Assembly - Direct One-Way
- Clutch Assembly - Planetary
- Clutch Bracket Assembly Fan
- Clutch Pack Assembly
- Clutch Pressure Plate
- Coil - A/C Compressor Clutch
- Coil Assembly - Ignition
- Collision Avoidance System
- Compass and Thermometer Readout Displays
- Compass Assembly
- Compressor - Air Conditioner
- Compressor – Front Brake
- Condenser Assembly - A/C
- Cone and Roller - Drive Pinion
- Cone Roller Front Wheel Inner
- Cone Roller Front Wheel Outer
- Connection - Water Outlet
- Control Arm Assembly - Front Suspension Upper/Lower
- Control Arm Assembly - Rear Suspension Upper/Lower
- Control Assembly - Brake Anti-Lock
- Control Assembly - Light Dimmer
- Control Assembly - Parking Brake
- Control Assembly - Relay Module
- Control Assembly - Transmission Gear
- Control Assembly - Valve Body
- Control Head - Rear Suspension
- Control Module - Air Suspension
- Control Module - Heated Windshield
- Control Unit - Anti-Lock
- Control Valve Seals
- Controls - Rear Seat
- Coolant Pump

- Coolant Temp Switch
- Coolant Tube Assembly - Inlet
- Coolant Tube Assembly - Outlet
- Cooler - Crankcase Oil
- Cooler - EGR Oil
- Cooler - Transmission Oil
- Cooler Assembly
- Cooler Assembly - Power Steering Oil
- Cooler Assembly EGR Recirculation
- Core - Air Conditioner Evaporator
- Core Assembly - A/C Condenser
- Core Assembly - Heater
- Countershaft
- Cover - Clutch Housing
- Cover - Cylinder Timing Gear
- Cover - Oil Level
- Cover - Rear Oil Pump
- Cover - Reverse Band Servo
- Cover - Transmission Control Indicator
- Cover Assembly - Flywheel
- Cover Assembly - Rear Engine
- Cover Assembly - Valve Push Rod
- Cover Front/Rear Seat Track
- Cover Rear Seat Support
- Cover Transducer Mounting Mechanism
- Differential Side Gears
- Diode Assembly
- Direct Clutch Cylinder
- Disc - Differential Clutch
- Disc and Hub Assembly A/C
- Disc Spring - Front Clutch
- Display - Navigation System
- Display Module
- Door Assembly Heater Air

- Door Assembly Heater and A/C
- Door Latch Control
- Door Latch Control Front/Rear
- Door Lock Actuator Front/Rear
- Door Striker Plate
- Dowel - Hood Lock
- Dowel Camshaft Sprocket
- Dowel Pin Cylinder Head
- Drive Assembly - Main Control Power Lift Window
- Drive Axle Bracket
- Drive Pinion
- Driveshaft Assembly
- Drum - Second Sun Gear
- Drum Assembly - Transmission Reverse
- Drum Planetary Gear
- Damper Front Spring
- Damper Rear Spring
- Detent - Transmission Control
- Diaphragm Assembly - TV Connector
- Diesel Fuel Injectors
- Diesel Injector Pump
- Diesel Lift Pump
- Differential Assembly - Rear Support
- Differential Locking
- Differential Side Gears
- Disc - Differential Clutch
- Disc Spring - Front Clutch
- Display - Navigation System
- Display Module
- Door Assembly Heater Air

- Electronic Pressure Control Solenoid
- Electronic Shift Control
- Electronic Speedometer
- Emissions Air Pump
- Fuel Filter
- Fuel Injection Module
- Fuel Level Sensor
- Fuel Line - Metal
- Fuel Pressure Regulator
- Fuel Pump Assembly
- Fuel Sep Fuel Vacuum
- Fuel Tank Vapor Valve
- Fuel Tank and Metal Lines
- Fuel Vapor Assembly
- Fuel Vapor Canister
- Gasket - Camshaft seal
- Gasket - Cylinder Head Cover
- Gasket - Engine Plenum
- Gasket - Fuel Injector Nozzle
- Gasket - Input Shaft Bearing
- Gasket - Lockout Hub
- Gasket - Master Cylinder Cooler
- Gasket - Oil Cooler
- Gasket - Oil Filter Adapter
- Gasket - Oil Pan
- Gasket - Oil Pump
- Gasket - Power Divider Cover
- Gasket - Pressure Regulator
- Gasket - PTO Cover
- Gasket - Rear Axle
- Gasket - Rear Wheel Bearing Rotor
- Gasket - Reverse Servo Plate

- Front Rebound Bumper
- Front Spring Air Suspension
- Front Stabilizer Bar
- Front Switch Assembly
- Front Twin I Beam Axle
- Front/Rear Brake Cylinder Assembly
- Front/Rear Brake Piston Seal
- Front/Rear Caliper Assembly
- Front/Rear Disc Brake Caliper Pin
- Fuel Computer - Display Assembly
- Fuel Gauge - Instrument Panel
- Fuel Injection Module
- Fuel Level Sensor
- Fuel Line - Metal
- Fuel Pressure Regulator
- Fuel Pump Assembly
- Fuel Sep Fuel Vacuum
- Fuel Tank Vapor Valve
- Fuel Tank and Metal Lines
- Fuel Vapor Assembly
- Fuel Vapor Canister
- Gasket - Camshaft seal
- Gasket - Cylinder Head Cover
- Gasket - Engine Plenum
- Gasket - Fuel Injector Nozzle
- Gasket - Input Shaft Bearing
- Gasket - Lockout Hub
- Gasket - Master Cylinder Cooler
- Gasket - Oil Cooler
- Gasket - Oil Filter Adapter
- Gasket - Oil Pan
- Gasket - Oil Pump
- Gasket - Power Divider Cover
- Gasket - Pressure Regulator
- Gasket - PTO Cover
- Gasket - Rear Axle
- Gasket - Rear Wheel Bearing Rotor
- Gasket - Reverse Servo Plate

- Guide Shoulder Strap
- Handle Assembly - Rear Seat
- Head - A/C Compressor Cylinder
- Headlamp/Tailamp Bulbs\*
- Heads-up Display
- Heat Element - Front Seat
- Heat Shield
- Heater and A/C Control Regulator
- Headlights - Factory-Installed\*
- High Voltage Charger
- Hinge and Check - Front/Rear Door Lower
- Hinge - Front/Rear Door Upper
- Horn Assembly - High Pitch
- Horn Assembly - Low Pitch
- Horn Switch
- Hose - Power Steering Pressure
- Hose - Power Steering Reservoir Top
- Hose and Filter - Power Steering Line
- Hose Assembly - A/C Vacuum
- Hose Assembly - Power Steering Pressure
- Hose Assembly - Power Steering Return
- Hose Exhaust Air Pump
- Hose Front/Rear Seat B/Pad
- Housing - Steering Gear
- Housing and Bearing Assembly Clutch
- Housing and Ins Assembly Transaxle
- Housing Assembly - Rear Axle
- Housing Assembly Roof Slide
- Housing Cover - Gearshift
- Hub - Differential Gear Clutch
- Hub - Direct Clutch
- Hub - Intermediate Clutch
- Hub - Synchronizer
- Hub - Transmission Output Shaft
- Hub /Knuckle Assembly Release
- Hub Crankshaft Pulley
- Hub Synchronizer
- Hybrid Battery Cooler
- Hybrid Battery Fan
- Hybrid Battery Fan Motor
- Hybrid DC to DC Converter
- Hybrid High Voltage Disconnect
- Hybrid Information Display
- Hybrid Traction/Electric Motor
- Hydraulic Actuator Assembly
- Hydraulic Piston
- Idler Assembly - Timing Belt
- Ignition Cylinder Lock
- Impeller - Water Pump
- Indicator - Rear Bracket
- Indicator Assembly - Oil Level
- Indicator Assembly - Radio Receiver Control
- Indicator Control Selector
- Inertia Switch
- Inflatable Seat Belts
- Insert - Oil Pump Drive Gear
- Insert - Synchronizer Hub
- Insulator - Front Axle Shift
- Insulator - Front Radius Arm
- Insulator - Front Spring
- Insulator - Rear Axle Differential
- Insulator - Rear Spring
- Insulator A/C Condenser
- Insulator EGR Tube
- Insulator Front Spring

**Lincoln Protect PremiumCARE Extended Service Plan is so comprehensive, it's easier to refer you to what isn't covered – here are some examples:**

**Examples covered by Your Auto Insurance**  
Generally include: fixed (non-moving) body parts, bumpers, glass, moldings, ornamentation, paint, rust, sheet metal, structural underbody framework, side and rearview mirrors (glass and housing), water leaks, wind noise, weather strips, wheels, wheel studs, wheel covers, convertible top and bow.

**Repairs Related to Your Maintenance Requirements**  
Service adjustments and cleaning, software upgrades, fixed (non-moving) body parts, batteries of all types and cables, belts, hoses, hose clamps, brakes (front hub, drums, shoes, linings, disc rotors, pads), manual transmission clutch disc, coolant, exhaust system (including catalytic converter), filters, fluids, lubricants, lights (bulbs, sealed beam, lenses), spark plugs, spark plug wires, squeaks and rattles, tires, tune-ups, wheel balancing, wheel alignment, LED lights, shock absorbers and compressed natural gas/liquid propane fuel system conversion components.

**Other Components and Repairs**  
Fabric, liners, fasteners, carpets, dash pad, wiper blades, knobs, trim, upholstery, physical damage or cosmetic issues, repairs covered by manufacturer recalls, any insurance or if the vehicle is within the time and mileage limits of any warranty, repairs caused by improper unreasonable use, unauthorized alterations or modifications of the vehicle, repairs caused by lack of required or recommended maintenance, and scheduled maintenance services. Costs or expenses for the teardown, rental expense, inspection or diagnosis of failures not covered by this Agreement. Refer to contract for details.

\*Interior/Exterior Lighting – coverage included only if Lighting Option is purchased.