

Premium Maintenance Plan

PowertrainCARE 29 Covered Components

BaseCARE 84 Covered Components

ExtraCARE 113 Covered Components

PremiumCARE 1,000+ Covered Components (Partial List)

Our most comprehensive maintenance plan covers:

- Engine Oil and Filter Changes
- Multi-Point Inspections
- Tire Rotations
- Replacement of Brake Pads and Linings When Worn
- Shock Absorbers/Struts
- Spark Plugs
- Clutch Discs
- Engine Belts
- Wiper Blades
- Diesel Exhaust Fluid Fill at the Time Scheduled Maintenance Is Performed at Dealership (If Necessary)

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Hubs, Automatic Front Locking (Four-Wheel Drive)
- Locking Rings (Four-Wheel Drive)
- Manifold (Exhaust and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case (Including All Internal Parts)
- Turbocharger/Supercharger Unit (Factory-Installed)
- Universal and Constant Velocity Joints (Front- and Rear-Wheel-Drive Axle)
- Valve Covers
- Water Pump

- A/C Clutch
- A/C Clutch Bearings
- A/C Compressor
- A/C Compressor Clutch Switch
- A/C Compressor Head
- A/C Compressor Seals
- A/C Condenser
- A/C Evaporator
- A/C Fluid Coil
- A/C Pulley
- All Internally Lubricated Parts (Engine)
- All Internally Lubricated Parts (Transfer Case & Transmission)
- Alternator
- Rear-Wheel-Drive Axle
- Back Glass, Heated (Electrical Only - Not Glass Damage or Breakage)
- Backing Plates (Brakes)
- Brake Booster (Power)
- Calipers (Brake)
- Column Lock (Tilt Wheel)
- Couplings (Steering)
- Cylinder Block
- Cylinder Heads
- Diesel Injector Pump
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Electronic Ignition Module
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)

- Flywheel
- Fuel Pump
- Harmonic Balancer and Bolt
- Hubs, Automatic Front Locking (Four-Wheel Drive)
- Idler Arm
- Ignition Switch
- Kingpins and Bushings (Front Suspension)
- Lines and Fittings (Metal – Brakes)
- Linkage and Bushings (Front & Rear Suspension)
- Linkages (Steering)
- Locking Rings (Four-Wheel Drive)
- MacPherson Struts (Front)
- Manifold (Exhaust and Bolts)
- Master Cylinder
- Metal Fuel Lines
- Oil Pan
- Oil Pump
- Parking Brake Linkage & Cables
- Power Steering Pump
- Pulley Asy (Power Steering Pump)
- Radiator Fan Relay
- Seals and Gaskets (Engine, Front and Rear-Drive Axles, Steering & Transmission)
- Self-Adjusters (Brakes)
- Shaft (Brake Pedal)
- Speedometer/Odometer (Electrical & Mechanical)
- Spindle and Spindle Supports (Front & Rear Suspension)
- Springs (Brakes)
- Stabilizer Bar (Front & Rear Suspension)
- Starter Motor
- Starter Motor Solenoid
- Steering Gear Housing, Manual and Power (Including All Internal Power)

- Switches (Manually Operated Electrical)
- Thermostat (Engine)
- Thermostat Housing (Engine)
- Tie Rods (Front Suspension)
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transmission Case
- Turbocharger/Supercharger Unit (Factory-Installed)
- Universal and Constant Velocity Joints (Front-and Rear-Wheel-Drive Axles)
- Valve Covers
- Voltage Regulators
- Water Pump
- Wheel Cylinders
- Wiper Motors
- Wiring Harnesses (Excluding Spark Plug Wires)

- A/C Accumulator
- A/C Clutch
- A/C Clutch Bearings
- A/C Compressor
- A/C Compressor Clutch Switch
- A/C Compressor Head
- A/C Compressor Seals
- A/C Condenser
- Adaptive Cruise Control
- Air Suspension, Electronic (Selected Components)
- All Internally Lubricated Parts (Engine)
- All Internally Lubricated Parts (Transmission)
- Alternator
- Anti-Lock Brake Module & Sensor
- Automatic Temperature Control
- Axle Shafts (Front- and Rear-Wheel-Drive Axles)
- Backing Plates (Brakes)
- Ball Joints (Upper & Lower)
- Brake Booster (Power)
- Brake Caliper (Brakes)
- Column Lock (Tilt Wheel)
- Combination Valve (Brakes)
- Control Arms (Lower)
- Control Arms (Upper & Lower)
- Control Arm Shafts & Bushings (Front & Rear Suspensions)
- Control Valve (Steering)
- Cooler and Metal Lines (Steering)
- Couplings (Steering)
- Cylinder Block
- Cylinder Heads
- Diesel Injectors
- Diesel Injector Fuel Lines
- Diesel Injector Pump
- Diesel Lift Pump
- Distributor Assembly
- Distributor Cap & Rotor
- Drive Axle Housing & Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- ETA Pump House Assembly
- Electronic Ignition Module
- Engine Mounts
- Evaporator (A/C)
- Field Coil (A/C)
- Final Drive Housing & Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel

- Flywheel Ring Gear
- Fuel Pump
- Fuel Tank and Metal Lines
- Gas & Diesel Fuel Injectors
- and Metal Fuel Lines
- Harmonic Balancer & Bolt
- Heated Back Glass (Electrical Only - No Glass Damage or Breakage)
- Heater Blower Motor
- Heater Core Asy
- Hubs, Automatic Front Locking (Four-Wheel Drive)
- Idler Arm (Steering)
- Ignition Module
- Ignition Switch
- Instrument Cluster, Electronic (Excluding Dash Pad, Clock, Audio and Visual Equipment)
- Keyless Entry System (Excluding Door Handles)
- Kingpins & Bushings (Front Suspension)
- Lines & Fittings (Brakes)
- Linkage & Bushings (Front Suspension)
- Linkages & Couplings (Steering)
- Locking Rings (Four-Wheel Drive)
- MacPherson Struts (Front)
- Master Cylinder
- Manifold (Exhaust and Bolts)
- Manifold (Intake and Bolts)
- Metal Links & Fittings (Brakes)
- Oil Pan
- Oil Pump
- Parking Brake Linkage & Cables
- Power Antenna
- Power Door Locks & Retainer Clips (Excluding Door Handles)
- Power Seat Motors
- Power Steering Pump/Electric Power Steering Actuator
- Power Window Motors/Regulators
- Pulley (A/C)
- Pulley Assembly, Power Steering Pump (Steering)
- Radiator & Radiator Fan (Excluding Door Clutch or Motor)
- Radiator Fan Relay
- Rear Axle Hub Bearings
- Seals & Gaskets (Engine, Transmission, Front- and Rear-Wheel-Drive Axles & Steering)

- SecuriCode™ Keyless Entry
- Self Adjusters (Brakes)
- Shaft (Brake Pedal)
- Speed Control
- Speedometer/Odometer (Electrical and Mechanical)
- Spindle & Spindle Supports
- Springs (Brakes)
- Stabilizer Bar
- Starter Motor
- Starter Motor Solenoid
- Steering Gear Housing, Manual & Power (Including All Internal Parts)
- Switches (Manually Operated Electrical)
- Thermostat (Engine)
- Thermostat Housing & Gasket (Engine)
- Tie Rods (Front Suspension)
- Timing Chain Cover
- Timing Chain (Gears or Belt)
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Transmission Module, External
- Transmission Vacuum Module
- Turbocharger/Supercharger Unit (Factory-Installed)
- Universal & Constant Velocity Joints
- Valve Covers (Engine)
- Voltage Regulator
- Water Pump
- Wheel Cylinders (Brakes)
- Wiper Motors
- Wiring Harnesses (Excluding Spark Plug Wires)

- A/C Accumulator
- A/C Actuator
- A/C Compressor
- A/C Compressor Assembly
- A/C Compressor Seals
- A/C Control Head
- A/C Line Assembly
- ABS Module
- ABS Sensor and Bracket
- Absorber - Steering Shaft
- Accumulator - Body Control Assembly
- Accumulator - Piston
- Actuator - Front/Rear Door Latch
- Actuator - Neutral Switch
- Actuator - Power Steering Valve
- Actuator - Steering Column Lock
- Actuator Assembly
- Actuator Assembly - Front Suspension
- Actuator Assembly - Rear Door
- Actuator Assembly - Rear Suspension
- Actuator Assembly - TV Console
- Actuator Assembly
- Brake Shoe Anchor Pin
- Brake Shoe Hold Cup
- Brake Shoe Hold Spring
- Brake Vacuum Booster Seal
- Brake Wiring Assembly
- Brush and Spring - Alternator
- Bumper - Front Axle
- Bumper - Rear Axle
- Bushing - All Internal and External
- Bushing - Brake Pedal
- Bushing - Connecting Rod
- Bushing - Door Hinge
- Bushing - Front Lower Arm
- Bushing - Front Suspension Lower Arm
- Bushing - Front Suspension Upper
- Bushing - Front/Rear Seat Adjuster
- Bushing - Front/Rear Seat Track

- Air Pump Muffler
- Air Reservoir Tank Assembly
- Air Spring Solenoid
- Air Suspension Compressor Assembly
- Air Suspension Dryer Assembly
- Air Suspension Lines
- Air Suspension Quick Connect
- Alternator
- Alternator Assembly
- Alternator Rotor
- AM/FM Receiver
- Ambient Sensor
- Ammeter - Alternator
- Amplifier Assembly
- Amplifier Assembly A/C
- Amplifier Assembly EGR Valve
- Anchor Push Rod
- Antenna Remote Control
- Anti-Lock Brake Sensor
- Anti-Slosh Module
- Anti-Skid Brake Relay
- Anti-Theft Alarm - Factory-Installed
- Arm - Steering Pitman
- Arm and Bushing Assembly - Front Suspension
- Arm and Bushing Assembly - Rear Suspension
- Arm and Pivot Shaft Assembly - Windshield Wiper
- Arm Assembly - Selector Plate
- Arm Assembly - Windshield Wiper
- Arm Bushing Front Suspension
- Arm Bushing Rear Suspension
- Arm Steering Assembly - Steering Idler
- Armature - Windshield Wiper Motor
- Armature Sensor Motor Assembly
- Assembly Parking Brake Cable Adjuster
- Auxiliary Heater Assembly
- Axle Assembly - Clutch
- Axle Assembly - Rear
- Axle Shaft Assembly
- Back-Up Siren/Alarm
- Baffle - Input Shaft
- Baffle - Output Shaft
- Balance Shaft Assembly

- Ball Joint Assembly - Upper/Lower
- Ballast - Hi-Mount Stop Lamp
- Band - Rear
- Band - Transmission Reverse
- Band Assembly - Transmission Intermediate
- Barometric and Map Sensor
- Barometric Pressure Sensor
- Bearing - Coupling Shaft
- Bearing - Differential Adjuster
- Bearing - Front Axle
- Bearing - Parking Brake
- Bearing - Reverse Idler
- Bearing - Worm Gear
- Bearing Assembly - A/C Comp Clutch
- Bearing Assembly - Air Comp
- Bearing Assembly - Air Suspension Compressor
- Bearings - All Internally Lubricated
- Bearings - Front Axle
- Belt Assembly Center Pass
- Belt Spot Sensor
- Blind Spot Sensor Bracket
- Block Assembly - Electrical Wiring
- Block Fuel Tube Support
- Blower Motor Assembly
- Blower Motor Resistor
- Body Assembly - Brake Booster
- Bolt - Gear Shift Housing
- Bolt Differential Gear Case
- Boost Pressure Switch
- Booster Assembly - Power Brake
- Boot - Brake Cylinder Front/Rear
- Boot - Drive Shaft Joint
- Boot - Gearshift Control
- Boot - Rear Axle CV Joint
- Boot - Steering Column
- Boot Courtesy Lamp Switch

- Brace - Engine to Transmission
- Bracket A/C Comp Mounting
- Bracket A/C Condenser Mt
- Bracket A/C Hose
- Bracket Assembly - Front Shock
- Bracket Assembly - Front/Rear Seat Side Armrest Mounting
- Bracket Assembly - Rear Shock
- Bracket Assembly - Rear Axle Damper
- Bracket for Radius Arm
- Bracket Rear Door Glass
- Bracket Stabilizer Bar Link
- Brake Adjuster Screw
- Brake Adjuster Spring
- Brake and Clutch M/C Bushing
- Brake Booster Control Seal
- Brake Caliper Support
- Brake Line - Metal
- Brake Master Cylinder Assembly
- Brake Master Cylinder Gasket
- Brake Master Cylinder Seal
- Brake Master Cylinder Switch
- Brake Pressure Accumulator
- Brake Shoe Adjuster Nut
- Brake Shoe Anchor Pin
- Brake Shoe Hold Cup
- Cap - Reservoir
- Cap - Water Outlet
- Cap Assembly – Master Cylinder
- Cap Assembly - Radiator
- Capacitor Assembly - Alternator
- Carrier - Rear Axle
- Carrier Assembly - Differential
- Carrier Assembly - OD Planetary Gear
- Case - A/C Evaporator
- Case Assembly - Differential
- Case Assembly - Power Divider
- Case Differential Gear Support
- Cellular Phone/Receiver/ Handset/Speaker Assembly
- Chain Timing
- Chassis Radio
- Child Seat Belt

- Cigar Lighter Assembly
- Clamp - Transmission Gear Shift Lever
- Clip – Brake Shoe Locator
- Clock Assembly
- Clutch and Pulley - Air Conditioner
- Clutch Assembly - Direct One-Way
- Clutch Assembly - Planetary
- Clutch Bracket Assembly Fan
- Clutch Pack Assembly
- Clutch Pressure Plate
- Coil - A/C Compressor Clutch
- Coil Assembly - Ignition
- Collision Avoidance System
- Compass and Thermometer Readout Displays
- Compass Assembly - Transmission Control
- Cable Front/Rear Seat Rear Adjuster
- Calibrator Assembly
- Caliper Assembly - Front/Rear
- Caliper Hold Down Assembly
- Camshaft Bearings
- Camshaft Damper and Pulley
- Camshaft Drive
- Cap - P/S Reservoir Filler
- Cap - Rad/O/Flow Control
- Cap - Reservoir
- Cap - Water Outlet
- Cap Assembly – Master Cylinder
- Cap Assembly - Radiator
- Capacitor Assembly - Alternator
- Carrier - Rear Axle
- Carrier Assembly - Differential
- Carrier Assembly - OD Planetary Gear
- Case - A/C Evaporator
- Case Assembly - Differential
- Case Assembly - Power Divider
- Case Differential Gear Support
- Cellular Phone/Receiver/ Handset/Speaker Assembly
- Chain Timing
- Chassis Radio
- Child Seat Belt

- Converter Pressure Valve
- Converter Support
- Coolant Pump
- Coolant Temp Switch
- Coolant Tube Assembly - Inlet
- Coolant Tube Assembly - Outlet
- Cooler - Crankcase Oil
- Cooler - EGR Oil
- Cooler - Transmission Oil
- Cooler Assembly
- Cooler Assembly - Power Steering Oil
- Cooler Assembly EGR Recirculation
- Core - Air Conditioner Evaporator
- Core Assembly - A/C Condenser
- Core Assembly - Heater
- Countershaft
- Cover - Clutch Housing
- Cover - Cylinder Timing Gear
- Cover - Oil Level
- Cover - Rear Oil Pump
- Cover - Reverse Band Servo
- Cover - Transmission Control Indicator
- Cover Assembly
- Cover Assembly - Flywheel
- Cover Assembly - Rear Engine
- Cover Assembly - Valve Push Rod
- Cover Front/Rear Seat Track
- Cover Rear Seat Support
- Cover Transducer Mounting
- Crankcase Vent Tube
- Crankshaft Assembly
- Crankshaft Bearings
- Cup Wheel Bearing
- CV Joint Assembly - Inboard
- CV Joint Assembly - Outboard
- Cylinder - Door Lock

- Cylinder Assembly - Direct Inter Clutch
- Cylinder Assembly - Door Lock
- Cylinder Assembly - Flywheel
- Cylinder Assembly - Rear Brake
- Cylinder Block
- Cylinder Head
- Temperature Sensor
- Cylinder Keys Latch
- Cylinder Shaft Assembly - A/C Compressor
- Damper - Crankshaft
- Damper - Rear Axle
- Damper - Steering Wheel
- Damper Assembly - Timing Chain
- Damper Drive Line Vibration
- Damper Front Spring
- Damper Rear Spring
- Detent - Transmission Control
- Diaphragm Assembly - TV Connector
- Diesel Fuel Injectors
- Diesel Injector Pump
- Diesel Lift Pump
- Differential Assembly - Rear
- Differential Case Gear Support
- Differential Locking Mechanism
- Differential Side Gears
- Diode Assembly
- Direct Clutch Cylinder
- Disc - Differential Clutch
- Disc and Hub Assembly A/C
- Disc Spring - Front Clutch
- Display - Navigation System
- Display Module

- Door Assembly Heater Air
- Door Assembly Heater and A/C
- Door Latch Control
- Door Latch Control Front/Rear
- Door Lock Actuator Front/Rear
- Door Striker Plate
- Dowel - Hood Lock
- Dowel Camshaft Sprocket
- Dowel Pin Cylinder Head
- Drive Assembly - Main Control Power Lift Window
- Drive Axle Assembly
- Drive Axle Bracket
- Drive Pinion
- Driveshaft Assembly
- Drum - Second Sun Gear
- Drum Assembly
- Drum Assembly - Transmission Reverse
- Drum Planetary Gear
- Dust Seal - Inner Driveshaft
- Dust Shield
- DVD Player and Display
- Eccentric Cam Fuel Pump
- EGR Adapter
- EGR Air Valve Filter
- EGR Cooler
- EGR Inlet Tube
- EGR Pressure Valve
- EGR Regulator Assembly
- EGR Tube
- EGR Valve Assembly
- EGR Valve Position Sensor
- EGR Valve Solenoid
- Elbow - Crankcase Vent
- Electric Clock Assembly
- Electric Power Steering Assist Assembly
- Electric Water Pump (Hybrid)
- Electronic Actuator Assembly
- Electronic Compass Assembly

- Front Pump Assembly - Transmission
- Front Rebound Bumper
- Front Spring Air Suspension
- Front Stabilizer Bar
- Front Switch Assembly
- Front Twin I Beam Axle
- Front/Rear Brake Cylinder Assembly
- Front/Rear Brake Piston Seal
- Front/Rear Caliper Assembly
- Front/Rear Disc Brake Caliper Pin
- Fuel Computer - Display Assembly
- Fuel Gauge - Instrument Panel
- Fuel Injection Module
- Fuel Level Sensor
- Fuel Line - Metal
- Fuel Pressure Regulator
- Fuel Pump Assembly
- Fuel Sep Fuel Vacuum
- Fuel Tank Vapor Valve
- Fuel Tank and Metal Lines
- Fuel Vapor Assembly
- Fuel Vapor Canister
- Gasket - Camshaft seal
- Gasket - Cylinder Head Cover
- Gasket - Engine Plenum
- Gasket - Fuel Injector Nozzle
- Gasket - Input Shaft Bearing
- Gasket - Lockout Hub
- Gasket - Master Cylinder Cooler
- Gasket - Oil Cooler
- Gasket - Oil Filter Adapter
- Gasket - Oil Pan
- Gasket - Oil Pump
- Gasket - Power Divider Cover
- Gasket - Pressure Regulator
- Gasket - PTO Cover
- Gasket - Rear Axle

- GPS System and Module - Factory-Installed
- Guide - Sun Roof Cable
- Guide - Timing Chain
- Guide Shoulder Strap
- Handle Roof on Glass
- Head - A/C Compressor Cylinder
- Headlamp Ballast
- Headlamp/Tailamp Bulbs
- Heads-up Display
- Heat Element - Front Seat
- Heat Shield
- Heater and A/C Control Regulator
- HID (High Intensity Discharge) Headlights - Factory-Installed
- High Voltage Charger
- Hinge and Check - Front/Rear Door Lower
- Hinge - Front/Rear Door Upper
- Horn Assembly - High Pitch
- Horn Assembly - Low Pitch
- Horn Switch
- Hose - Crankcase Vent
- Hose - Power Steering Pressure
- Hose - Power Steering Reservoir Top
- Hose and Filter - Power Steering Line
- Hose Assembly - A/C Vacuum
- Hose Assembly - Power Steering Pressure
- Hose Assembly - Power Steering Return
- Hose Exhaust Air Pump
- Hose Front/Rear Seat B/Pad
- Hose Fuel Vapor Return
- Housing - Steering Gear

- Gasket - Rear Wheel Bearing Rotor
- Gasket - Reverse Servo Plate
- Gasket - Trans Assembly
- Gasket - Trans Gear Shift
- Gasket - Transmission Intermediate Band
- Gasket - Turbo Oil Tub
- Gasket - Turbocharger
- Gasket - Water Pump
- Gasket - Wiring Connector
- Gasket and Shaft Seal
- Gauge Assembly Vacuum
- Gear - Camshaft Drive
- Gear - Center Shaft Reverse
- Gear - Countershaft Clutch
- Gear - Differential Shift
- Gear - Engine Balance Shaft
- Gear - Low and Reverse
- Gear - Oil Pump Drive
- Gear - Output Shaft
- Gear - Reverse
- Gear - Reverse Idler
- Gear - Transmission
- Gear - Transmission Countershaft
- Gear - Transmission Reverse Idler
- Gear and Pinion
- Gear Assembly - Final Drive
- Gear Assembly - Intermediate
- Gear Assembly - Power Steering Short
- Gear Assembly Spare Wheel
- Gear Bushing Assembly - Reverse Idle
- Gear Differential Planetary
- Gear Front Axle Shift
- Gear Ring Gear
- Gear Steering Column Lock
- Gear/Hub - Auxiliary Trans
- General Electronic Module

- Housing and Bearing Assembly Clutch
- Housing and Ins Assembly Transaxle
- Housing Assembly
- Housing Assembly - Rear Axle
- Housing Assembly Roof Slide
- Housing Cover - Gearshift
- Hub - Differential Gear Clutch
- Hub - Direct Clutch
- Hub - Intermediate Clutch
- Hub - Synchronizer
- Hub - Transmission Output Shaft
- Hub /Knuckle Assembly Release
- Hub Crankshaft Pulley
- Hub Synchronizer
- Hybrid Battery Cooler Assembly
- Hybrid Battery Fan
- Hybrid Battery Fan Motor
- Hybrid DC to DC Converter
- Hybrid High Voltage Disconnect
- Hybrid Information Display
- Hybrid Traction/Electric Motor
- Hydraulic Actuator Assembly
- Hydraulic Piston
- Idler Assembly - Timing Belt
- Ignition Cylinder Lock
- Impeller - Water Pump
- Indicator - Rear Bracket
- Indicator Assembly - Oil Level
- Indicator Assembly - Radio Receiver Control
- Indicator Control Selector
- Inertia Switch
- Inflatable Seat Belts
- Insert - Oil Pump Drive Gear
- Insert - Synchronizer Hub
- Insulator - Alternator

Essential Maintenance Plans

Plan ahead now and protect yourself against rising maintenance costs with this affordable array of standard service items for your vehicle:

- Limited Maintenance covers lube/oil/filter, tire rotation, diesel exhaust fluid refill at service interval, multi-point inspection
- Basic Maintenance covers lube/oil/filter, tire rotation, multi-point inspection
- Engine Maintenance covers lube/oil/filter only

Lincoln Protect PremiumCARE Extended Service Plan is so comprehensive, it's easier to refer you to what isn't covered – here are the highlights:

Repairs Related to Your Auto Insurance

Examples include: fixed (non-moving) body parts, bumpers, glass, moldings, ornamentation, paint, rust, sheet metal, structural underbody framework, side and rearview mirrors (glass and housing), water leaks, wind noise, weather strips, wheels, wheel studs, wheel covers, convertible top and bow.

Repairs Related to Your Maintenance Requirements

Service adjustments and cleaning, software upgrades, fixed (non-moving) body parts, batteries of all types and cables, belts, hoses, hose clamps, brakes (front hub, drums, shoes, linings, disc rotors, pads), manual transmission clutch disc, coolant, exhaust system (including catalytic converter), filters, fluids, lubricants, lights (bulbs, sealed beam, lenses), spark plugs, spark plug wires, squeaks and rattles, tires, tune-ups, wheel balancing, wheel alignment, LED lights, shock absorbers and compressed natural gas/liquid propane fuel system conversion components

Other Components and Repairs

Fabric, liners, fasteners, carpets, dash pad, wiper blades, knobs, trim, upholstery, physical damage or cosmetic issues, repairs covered by manufacturer recalls, any insurance or if the vehicle is within the time and mileage limits of any warranty, repairs caused by improper unreasonable use, unauthorized alterations or modifications of the vehicle, repairs caused by lack of required or recommended maintenance, and scheduled maintenance services. Costs or expenses for the teardown, rental expense, inspection or diagnosis of failures not covered by this Agreement. Refer to contract for details.